 


GARMIN®

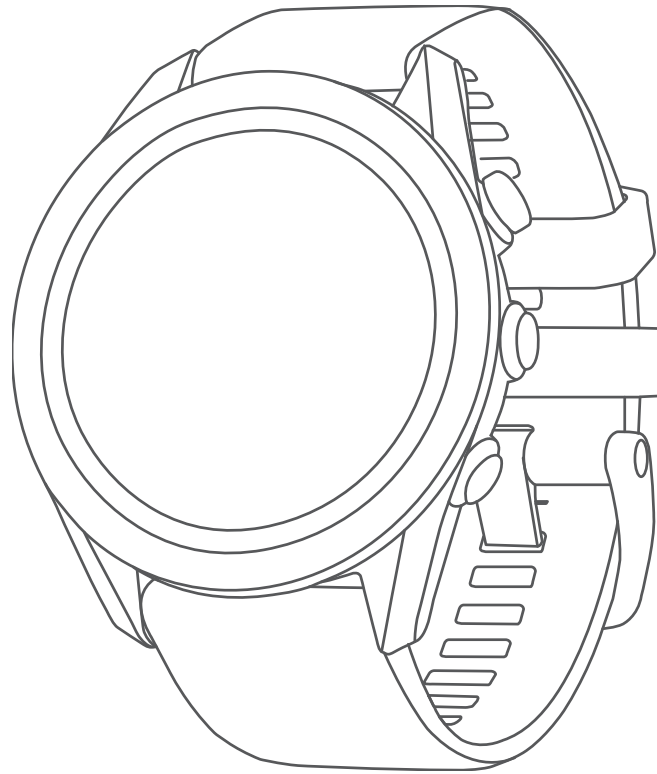

APPROACH® s60/62

РЪКОВОДСТВО

© 2022 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, ANT+®, Approach®, Auto Lap®, Auto Pause®, Edge®, and QuickFit® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Body Battery™, Connect IQ™, Garmin AutoShot™, Garmin Connect™, Garmin Express™, Garmin Golf™, Garmin Pay™, and tempe™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google Inc. The BLUETOOTH® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Advanced heartbeat analytics by Firstbeat. Handicap Index® and Slope Rating® are registered trademarks of the United States Golf Association. iOS® is a registered trademark of Cisco Systems, Inc. used under license by Apple Inc. iPhone® and Mac® are trademarks of Apple Inc., registered in the U.S. and other countries. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners.

This product is ANT+® certified. Visit www.thisisant.com/directory for a list of compatible products and apps.

M/N: A03680

Въведение

 **WARNING**

Important Safety u Product Information

Преглед на устройството



① Touchscreen:

② Action button:

③  Menu button:

④  Back button:
ПЪРВИ СЪПКИ

1 Menu,

2

3

4

Използване на функциите на часовника


•

•

•



Сдвояване на вашия смартфон

1. Garmin Golf™, Approach, Bluetooth
2. ✓
3.  Settings > Pair Phone.
Garmin Devices > Add Device

Зареждане на устройството

⚠ ВНИМАНИЕ

Important Safety and Product Information

ЗАБЕЛЕЖКА

1. USB



2. USB
3. USB

Актуализации на продукта

Garmin Express™ (www.garmin.com/express).
Garmin Golf.

• Garmin:

-
-
- Garmin Golf
-

 
Настройка на Garmin Express

- 1 USB
- 2 garmin.com/express.
- 3

Голф

- 1
- 2
- 3
- 4 ✓
- 5 tee box.

Изглед на дупка

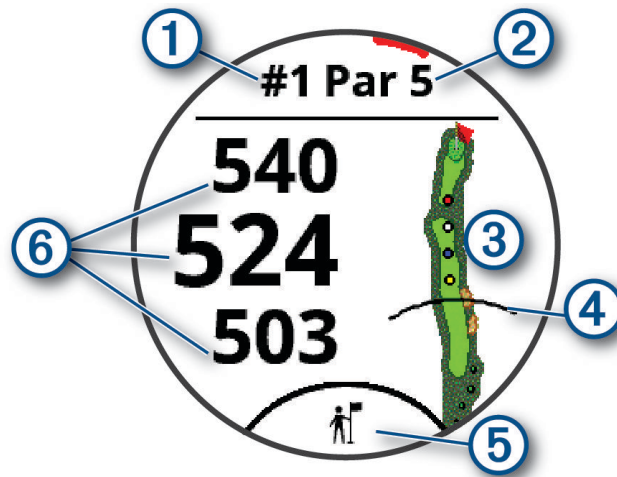

- ①
- ②
- ③
- ④
- ⑤
- ⑥

tee box.
caddy club.

 
PlaysLike.

1.

Режим на големи числа

Menu

Settings > Golf Settings > Big Numbers.

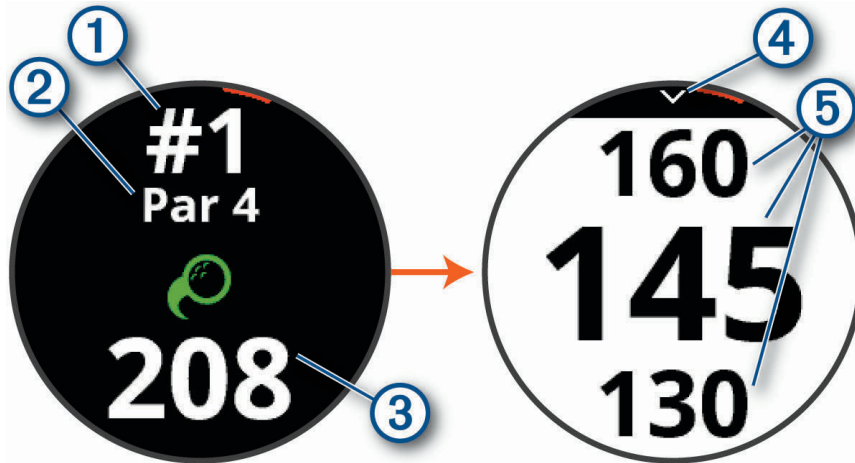

①

②

③

④

⑤

PlaysLike.

Информация за устройството

Смяна на QuickFit каишката

1 QuickFit



2
3
4 1 3,

Спецификации

	14 20 GPS
5 ATM ¹	
	-20° 55°C (-4° 131°F)
0° 45°C (32° 113°F)	
/	2.4 GHz @ 3.2 dBm nominal 13.56 MHz @ -40 dBm nominal

Грижа за устройството

ЗАБЕЛЕЖКА

Почистване на устройството

ЗАБЕЛЕЖКА

1

2

: garmin.com/fitandcare.

Дългосрочно съхранение

50%,

Преглед на информация за устройството

ID,

1 Menu.

2 Settings > System > About.

Преглед на регулаторната и информация за съответствието с електронния етикет

FCC,

1 Menu.

2 System > About.

Управление на данни

: Windows 95, 98, Me, Windows NT , Mac OS 10.3 -

Изтриване на файлове

ЗАБЕЛЕЖКА

- 1 Garmin.
- 2
- 3
- 4 Delete Mac
MTP Garmin Windows.

Получаване на повече информация

- support.garmin.com Garmin.
- buy.garmin.com Garmin
- www.garmin.com/ataccuracy

