Quick Installation Guide




MW325R

300Mbps Enhanced Wireless N Router

For more information, please visit our website: http://www.mercusys.com 7107500053 REV1.0.0


Connect the Hardware

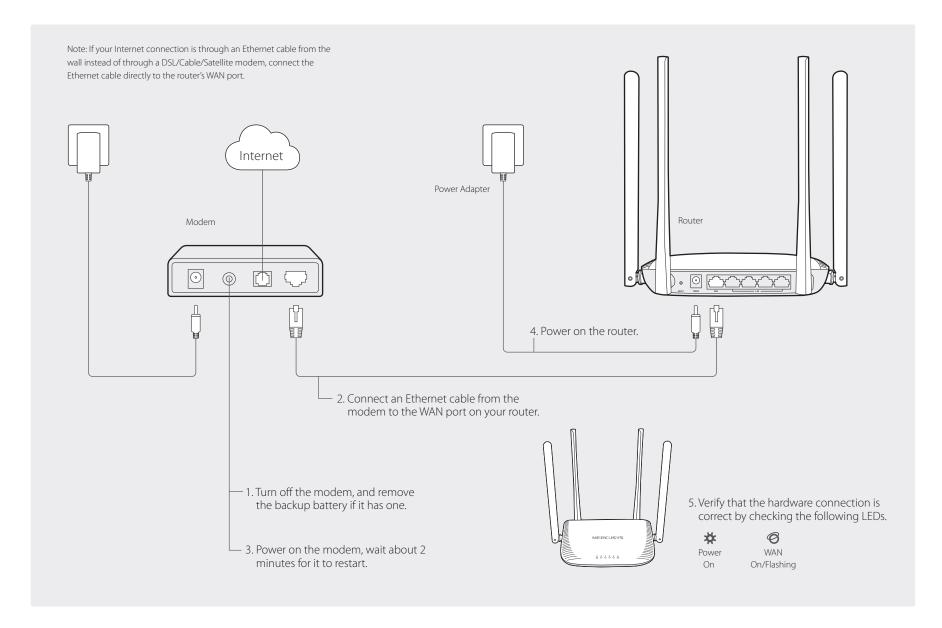

2 | Configure the Router

1 Connect your computer to the router (Wired or Wireless).

Wired

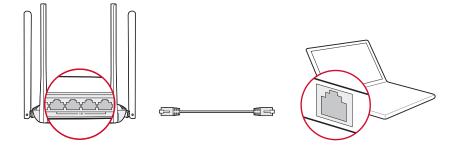


Wireless

Connect wirelessly using the SSID (Network Name) printed on the product label at the bottom of the router.



- 2 Configure the router using a web browser.
- a. Enter http://mwlogin.net in the address bar of the web browser. Create a login password when prompted.

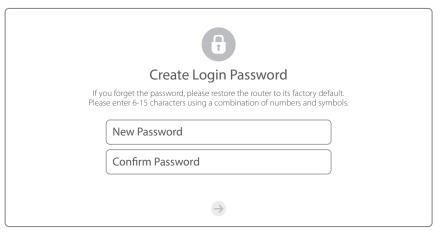

Note: If the login window does not appear, please refer to FAQ>Q1.


c. Customize your wireless network name and password.



b. Select your connection type and enter the corresponding parameters. If you are unsure of your connection type, click **Auto Detect**. Here we use PPPoE as an example.



d. Click ${\color{red} {\mathbb Q}}$ to complete the setup. Then you can enjoy the Internet! ${\color{red} {\Theta}}$

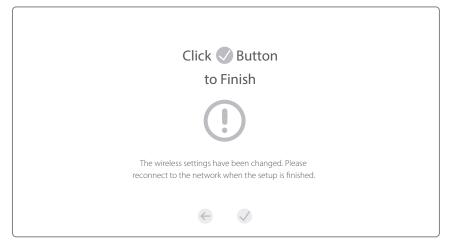

LED Indicators

LED	Name	Status	Indication
*	Power	Off On	Power is off. Power is on.
⊕	LAN	Off On Flashing	The corresponding port is not connected. The corresponding port is connected. The corresponding port is transmitting/receiving data.

FAQ (Frequently Asked Questions)

Q1. What can I do if the login window does not appear?

- A1. If the computer is set to a static IP address, change it to obtain an IP address automatically.
- A2. Verify that http://mwlogin.net is correctly entered in the web browser.
- A3. Use another web browser and try again.
- A4. Reboot your router and try again.
- A5. Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?

- A1. Check if the Internet is working properly by connecting a computer directly to the modem via Ethernet cable.
- If not, contact your Internet Service Provider.
- A2. Open a web browser, enter http://mwlogin.net and try to set up again.
- A3. Reboot your router and try again.

Note: For cable modem users, reboot the modem first. If the problem still exists, log in to the web management page, go to Advanced>Network>MAC Address Settings, select Use the current computer's MAC address (MAC Clone) and Save.

Q3. How do I restore the router to its factory default settings?

- A1. With the router powered on, press and hold the RESET button on the rear panel of the router for at least 5 seconds until all the LEDs turn on temporarily.
- A2. Log in to the web management page of the router, and go to Advanced>System Tools> Factory Default Restore, click Restore, then wait until the process completes.

Q4. What can I do if I forget my web management page password?

A. Restore the router to its factory default settings and then create a new password when prompted.

Q5. What can I do if I forget my wireless network password?

- A1. By default, the wireless network has no password.
- A2. If you have set password for the network, log in to the router's web management page, go to Basic>Wireless to obtain or reset your password.