

Quick Start Guide

LTE3302-M432
4G LTE Indoor Router



ZYXEL ENGLISH | DEUTSCH | FRANÇAIS | ITALIANO | ESPAÑOL

Support Information

North America + 1800 978 7222
USA support@zyxel.com

Italy + 39 011 2308000
support@zyxel.it

UK + 44 3331 559 301
support@zyxel.co.uk

Spain + 911 792 100
soporte@zyxel.es

Germany + 49 2405 690969
support@zyxel.de

France + 33 4 72 52 97 97
support@zyxel.fr



See the User's Guide at www.zyxel.com for more information,
including safety warnings and customer support.

EU Importer
Zyxel Communications A/S
Generatorvej 8D, 2860 Søborg, Denmark.
<http://www.zyxel.dk>

US Importer
Zyxel Communications, Inc.
1130 North Miller Street Anaheim, CA 92806-2001
<http://www.us.zyxel.com>

Copyright © 2017 Zyxel Communications Corp. All Rights Reserved.


Hardware Installation

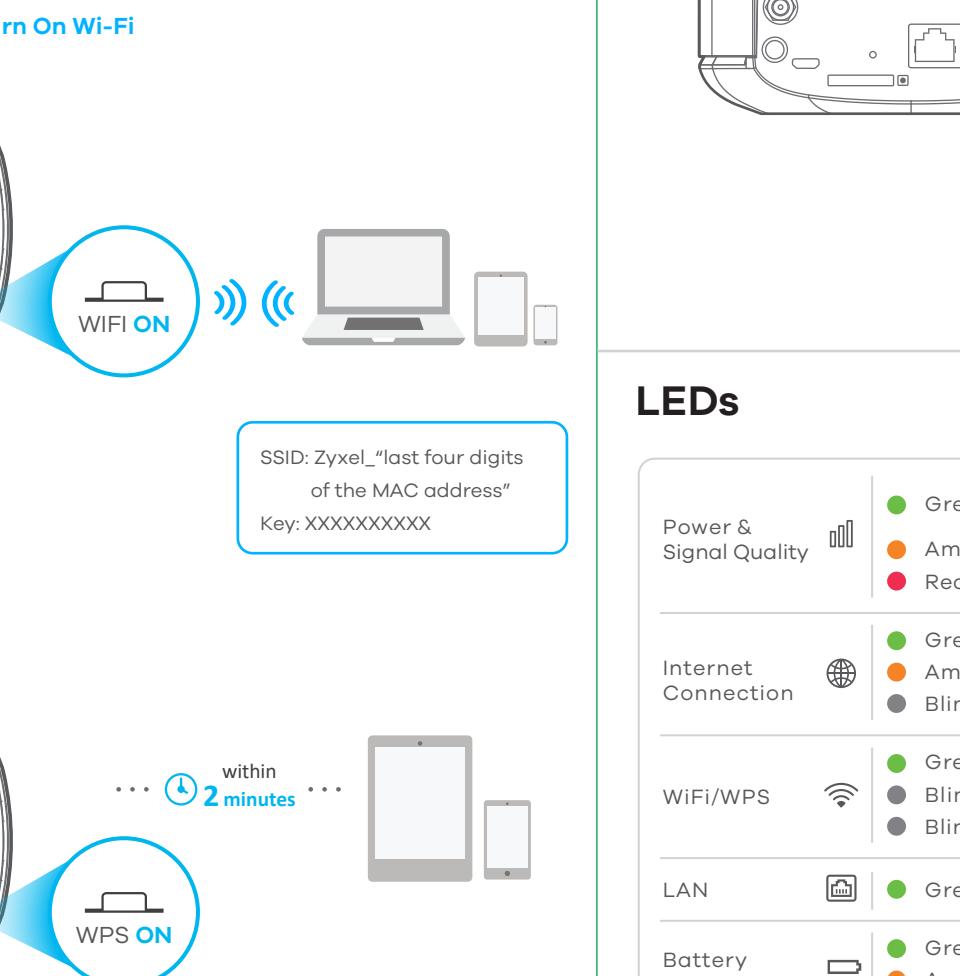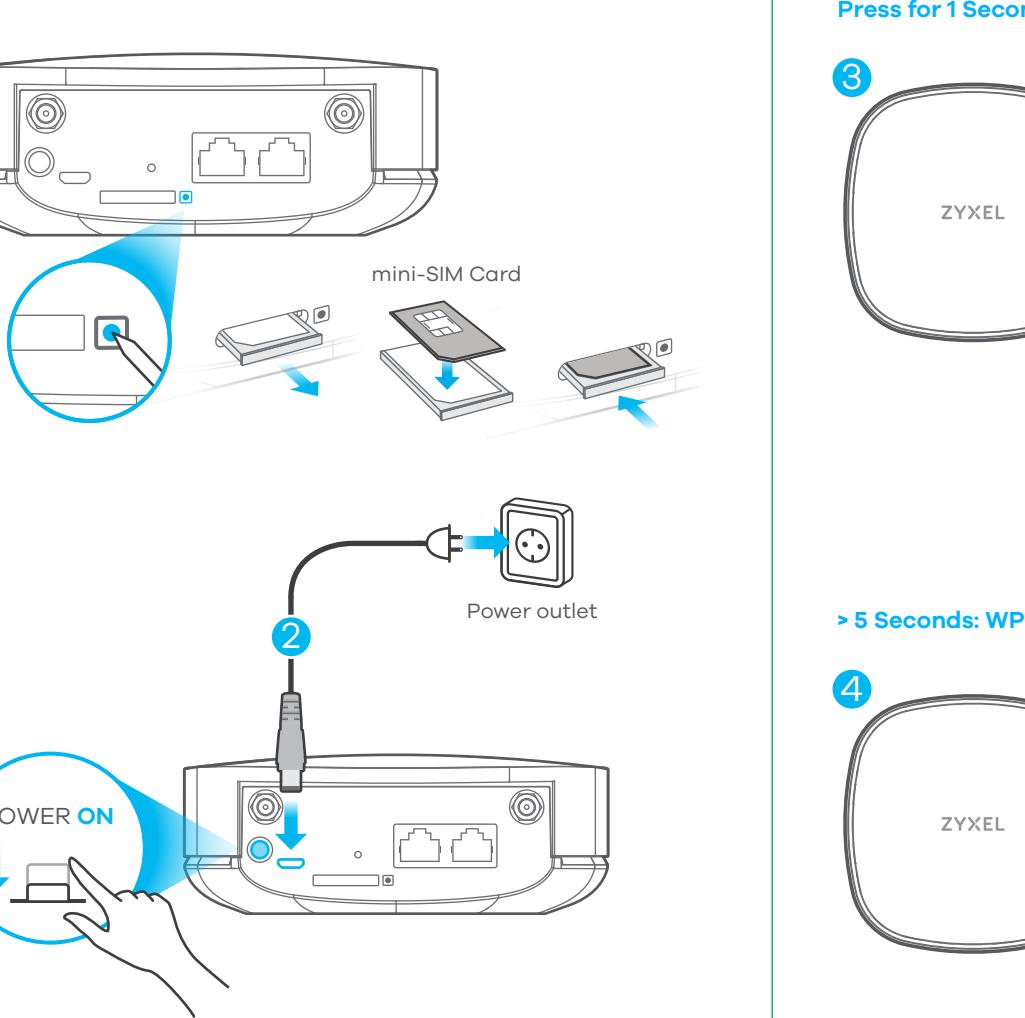

LEDs

Power & Signal Quality	Green - Power on Amber - Signal strength: Fair Red - Signal strength: Poor
Internet Connection	Green - Successful 4G network connection Amber - Successful 2G/3G network connection Blinking - New SMS
WiFi/WPS	Green - 2.4GHz WLAN on Blinking (fast) - Sending and receiving data Blinking (slow) - WPS on
LAN	Green - LAN connection ready
Battery (Optional)	Green - Battery fully charged Amber - Battery charging


Via a Computer or Notebook

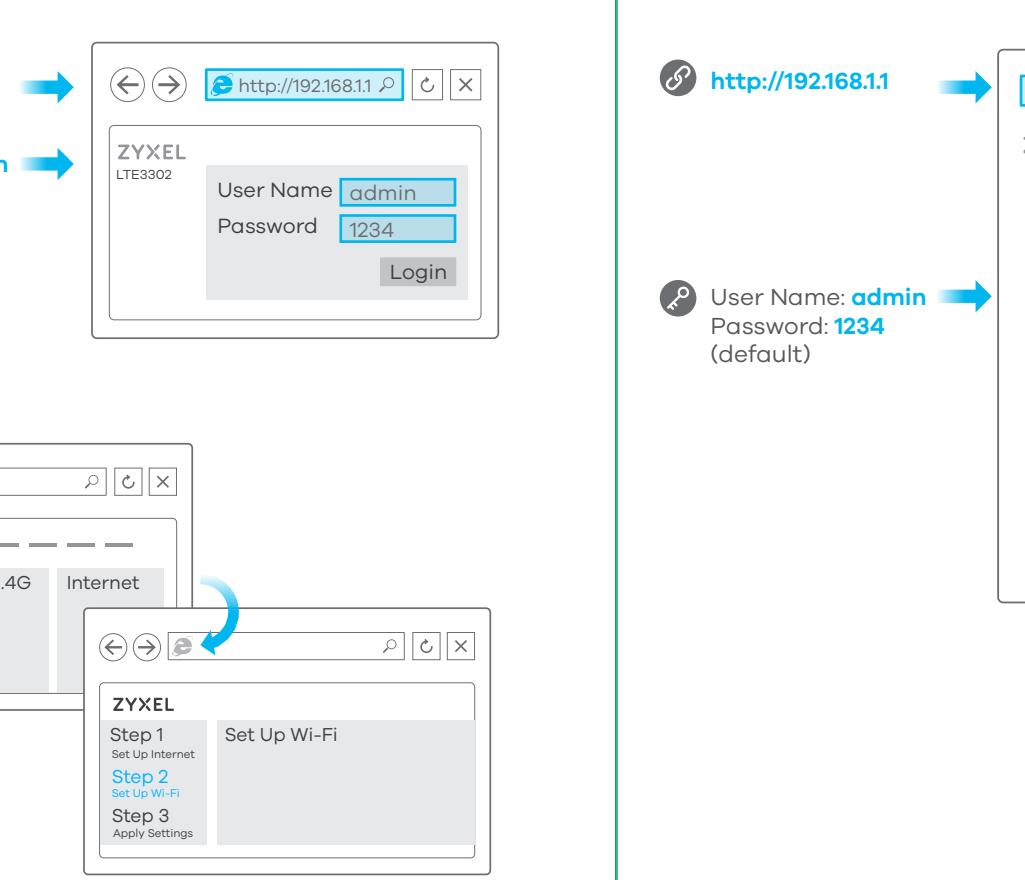

Via a Mobile Device



Optional Accessories

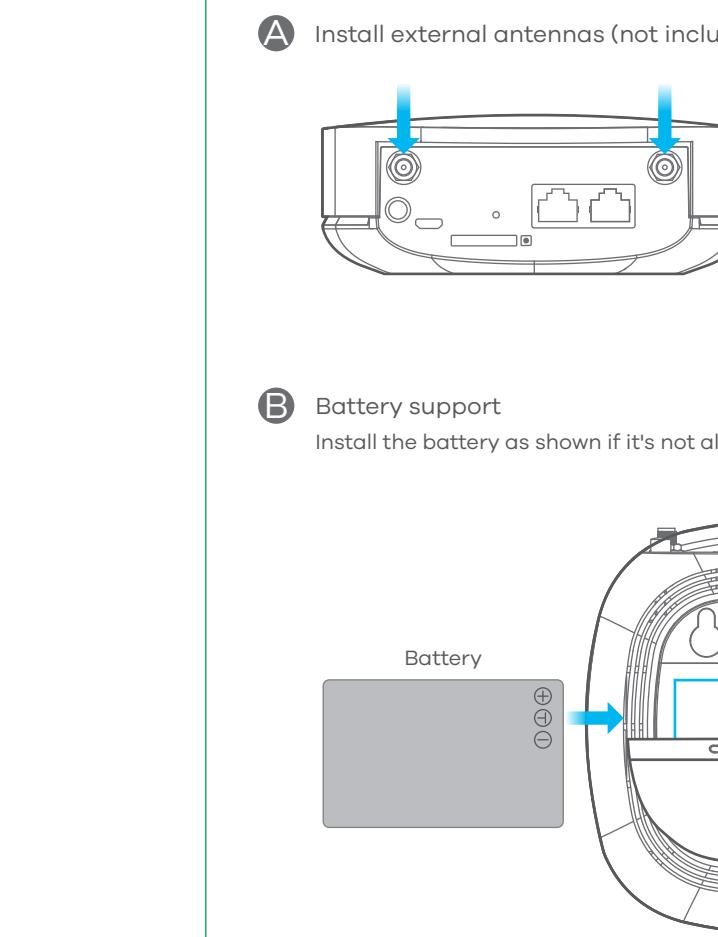

Troubleshooting

Power and Hardware Connections

- Make sure the SIM card is correctly installed in the LTE3302.
- Make sure the micro USB cable is connected correctly.

LTE3302 Access and Login

- Make sure you are using the correct IP address.
- The default IP address is 192.168.1.1.

If you changed the IP address and have forgotten it, you have to reset the device to its factory defaults.

Internet Access

- Make sure you insert an LTE SIM card into the card slot before turning on the LTE3302.

- Log into the web configurator (admin, 1234 are the default username and password).

Click **Setup Wizard**, then check the setting in **Step 1 Setup Internet**.

- Make sure your LTE SIM card's account is valid and has an active data plan.

- If you are using a pre-paid SIM card, insert the SIM card on another LTE device to check if the SIM card still works. If the SIM card works without any problems on another LTE device, contact the vendor. If the SIM card doesn't work, contact your service provider.

Wi-Fi Connections

- Make sure the wireless LAN is enabled on the LTE3302.
- Make sure the wireless adapter (installed on your computer) is working properly.

2G/3G/LTE Connections

- Make sure your SIM card's account is valid and has an active data plan.
- Install the 2G/3G/LTE external antennas to strengthen the cellular signal.

Quick Start Guide

LTE3302-M432
4G LTE Indoor Router



ZYXEL
NEDERLANDS | DANSK | NORSK |
SUOMI | SVENSKA

Support Information

Netherlands
+ 31 23 5553689
support@zyxel.nl

Finland
+ 358 9 4780 8400
support@zyxel.fi

Denmark
+ 45 39 55 07 00
support@zyxel.dk

Sweden
+ 46 8 557 760 60
support@zyxel.se

Norway
+ 47 22 80 61 80
teknisk@zyxel.no




See the User's Guide at www.zyxel.com for more information,
including safety warnings and customer support.

EU Importer
Zyxel Communications A/S
Generatorvej 8D, 2860 Søborg, Denmark.
<http://www.zyxel.dk>


US Importer
Zyxel Communications, Inc.
1130 North Miller Street Anaheim, CA 92806-2001
<http://www.us.zyxel.com>

Copyright © 2017 Zyxel Communications Corp. All Rights Reserved.

Hardware Installation

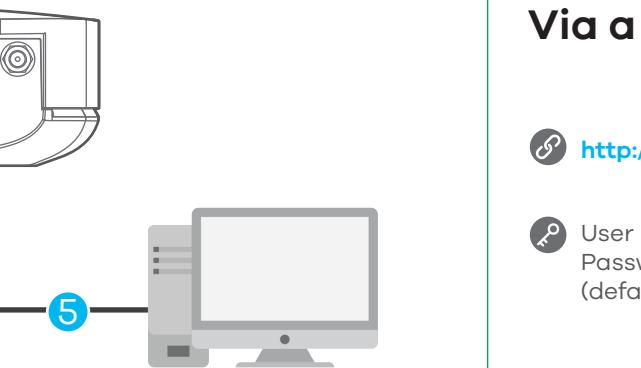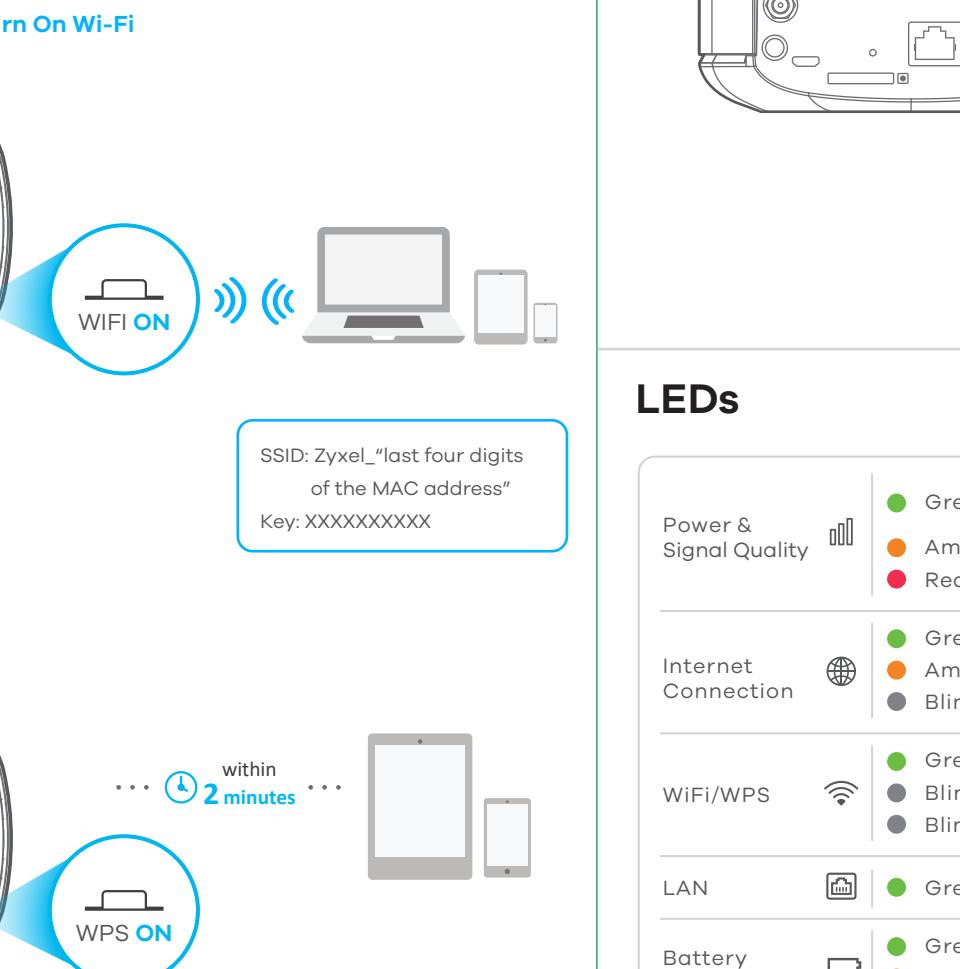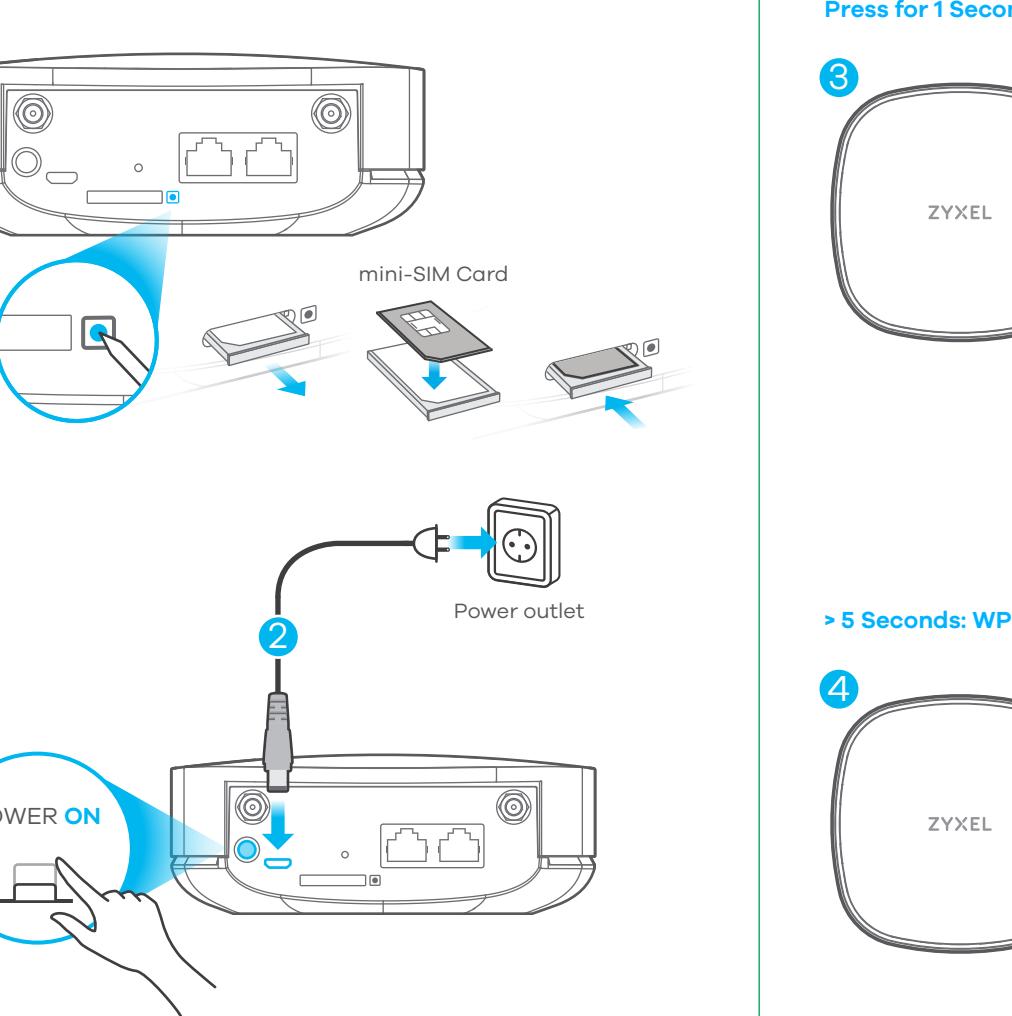


Via a Computer or Notebook

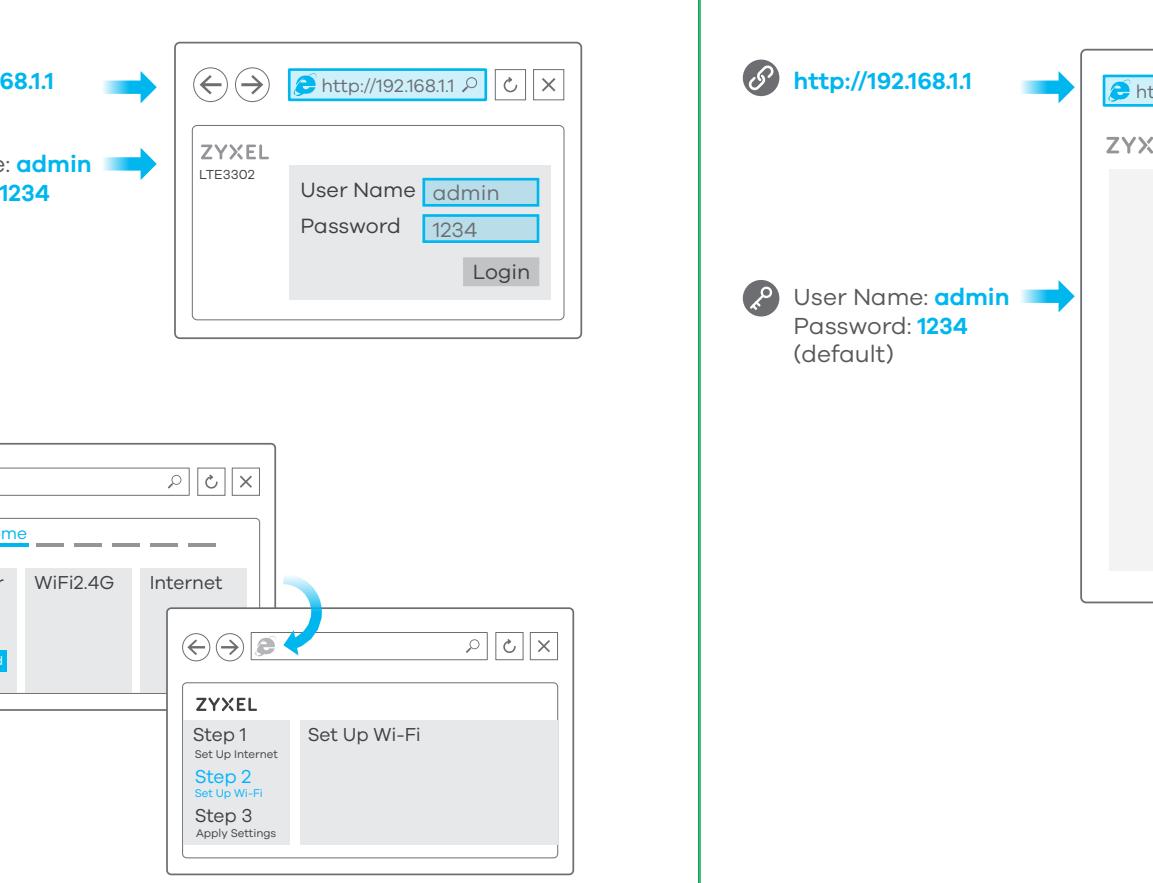

Via a Mobile Device



Optional Accessories

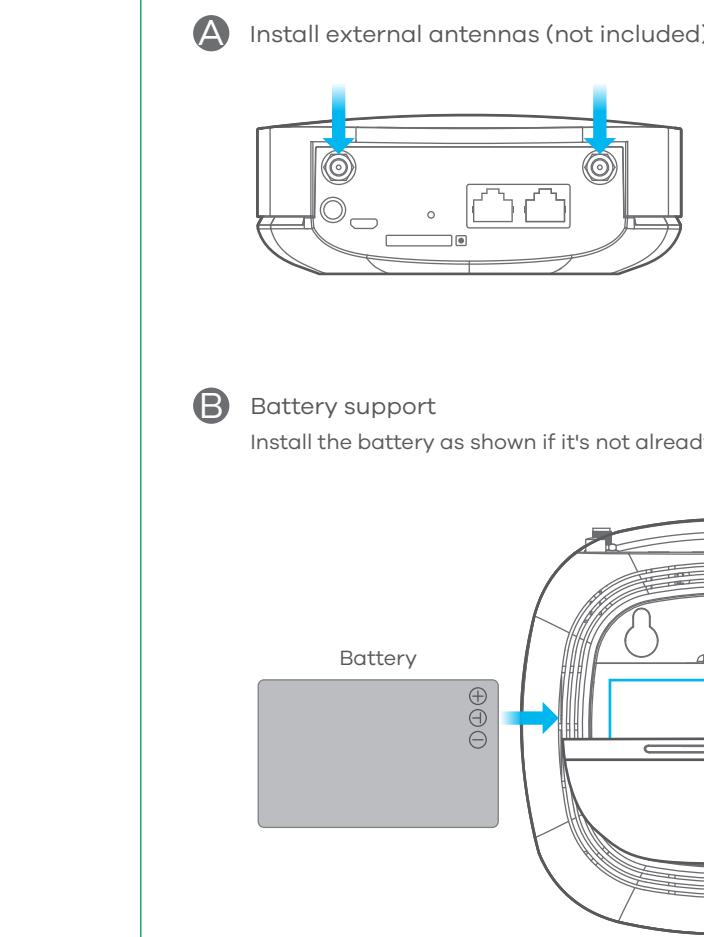

Troubleshooting

Power and Hardware Connections

- Make sure the SIM card is correctly installed in the LTE3302.
- Make sure the micro USB cable is connected correctly.

LTE3302 Access and Login

- Make sure you are using the correct IP address.

• The default IP address is 192.168.1.1.

- If you changed the IP address and have forgotten it, you have to reset the device to its factory defaults.

Internet Access

- Make sure you insert an LTE SIM card into the card slot before turning on the LTE3302.

- Log into the web configurator (admin, 1234 are the default username and password).

Click Setup Wizard, then check the setting in Step 1 Setup Internet

- Make sure your LTE SIM card's account is valid and has an active data plan.

- If you are using a pre-paid SIM card, insert the SIM card on another LTE device to check if the SIM card still works. If the SIM card works without any problems on another LTE device, contact the vendor. If the SIM card doesn't work, contact your service provider.

Wi-Fi Connections

- Make sure the wireless LAN is enabled on the LTE3302.

- Make sure the wireless adapter (installed on your computer) is working properly.

2G/3G/LTE Connections

- Make sure your SIM card's account is valid and has an active data plan.

- Install the 2G/3G/LTE external antennas to strengthen the cellular signal.

Quick Start Guide

LTE3302-M432
4G LTE Indoor Router



ZYXEL ČEŠTINA | MAGYAR | ROMÂNĂ |
POLSKI |

Support Information

Czech ☎ +420 241 774 665
✉ support@cz.zyxel.com

Romania ☎ info@ro.zyxel.com

Hungary ☎ +36 1 848 0690
✉ support@zyxel.hu

Poland ☎ +48 22 652 16 26
✉ support@pl.zyxel.com



See the User's Guide at www.zyxel.com for more information,
including safety warnings and customer support.

EU Importer
Zyxel Communications A/S
Generatorvej 8D, 2860 Søborg, Denmark.
<http://www.zyxel.dk>

US Importer
Zyxel Communications, Inc
1130 North Miller Street Anaheim, CA 92806-2001
<http://www.us.zyxel.com>

Copyright © 2017 Zyxel Communications Corp. All Rights Reserved.


Hardware Installation

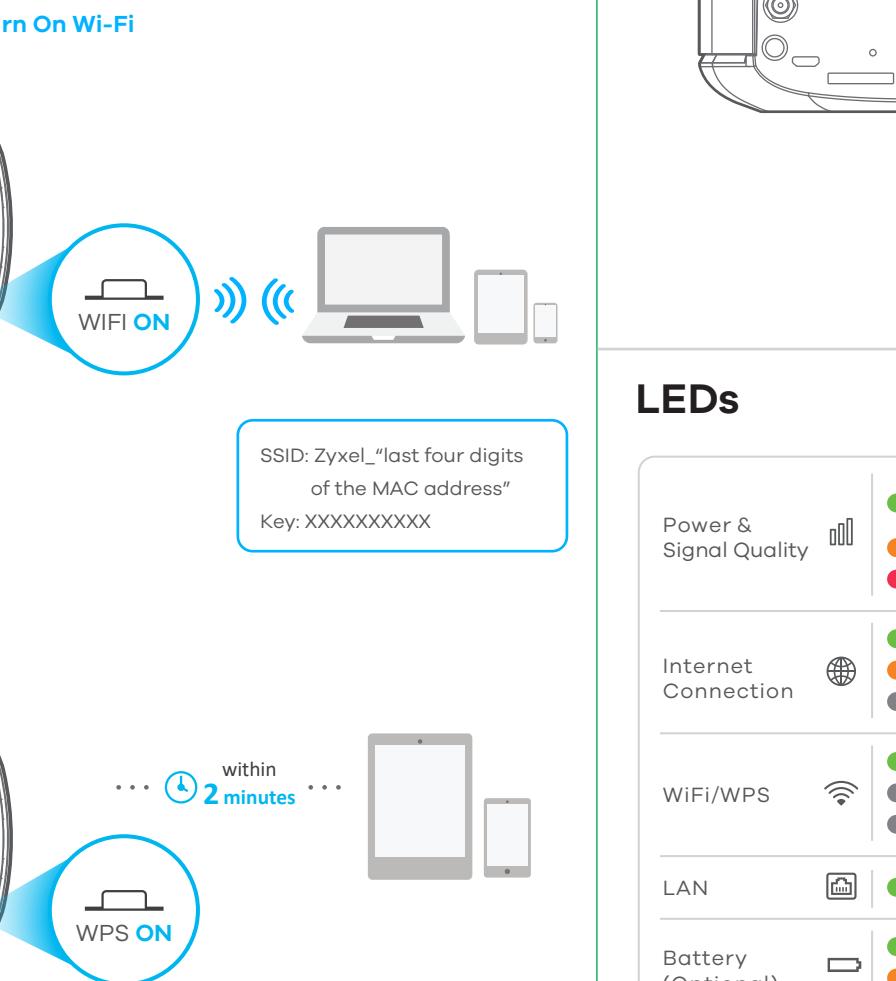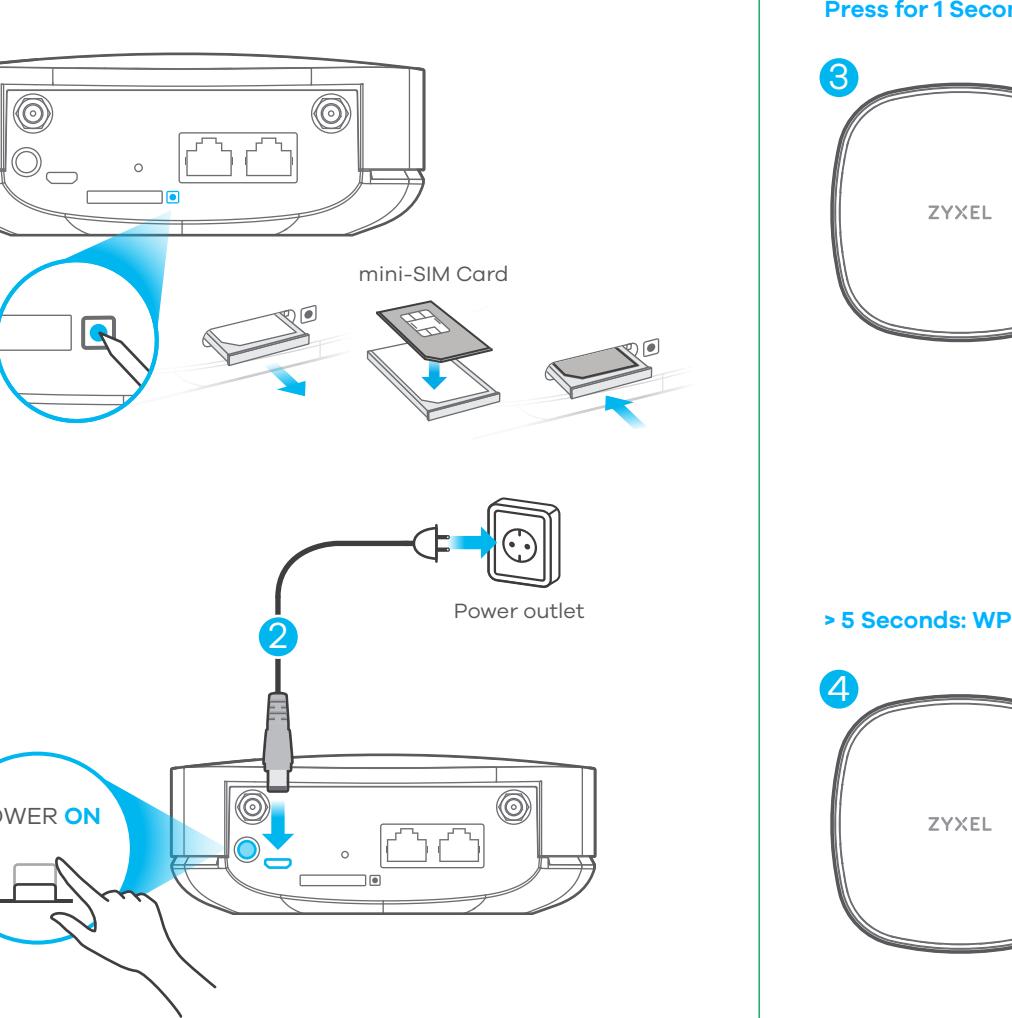

LEDs

Power & Signal Quality	
Power on	Green - Signal strength: Excellent Amber - Signal strength: Fair Red - Signal strength: Poor
Internet Connection	Green - Successful 4G network connection Amber - Successful 2G/3G network connection Blinking - New SMS
WiFi/WPS	Green - 2.4GHz WLAN on Blinking (fast) - Sending and receiving data Blinking (slow) - WPS on
LAN	Green - LAN connection ready
Battery (Optional)	Green - Battery fully charged Amber - Battery charging


Via a Computer or Notebook

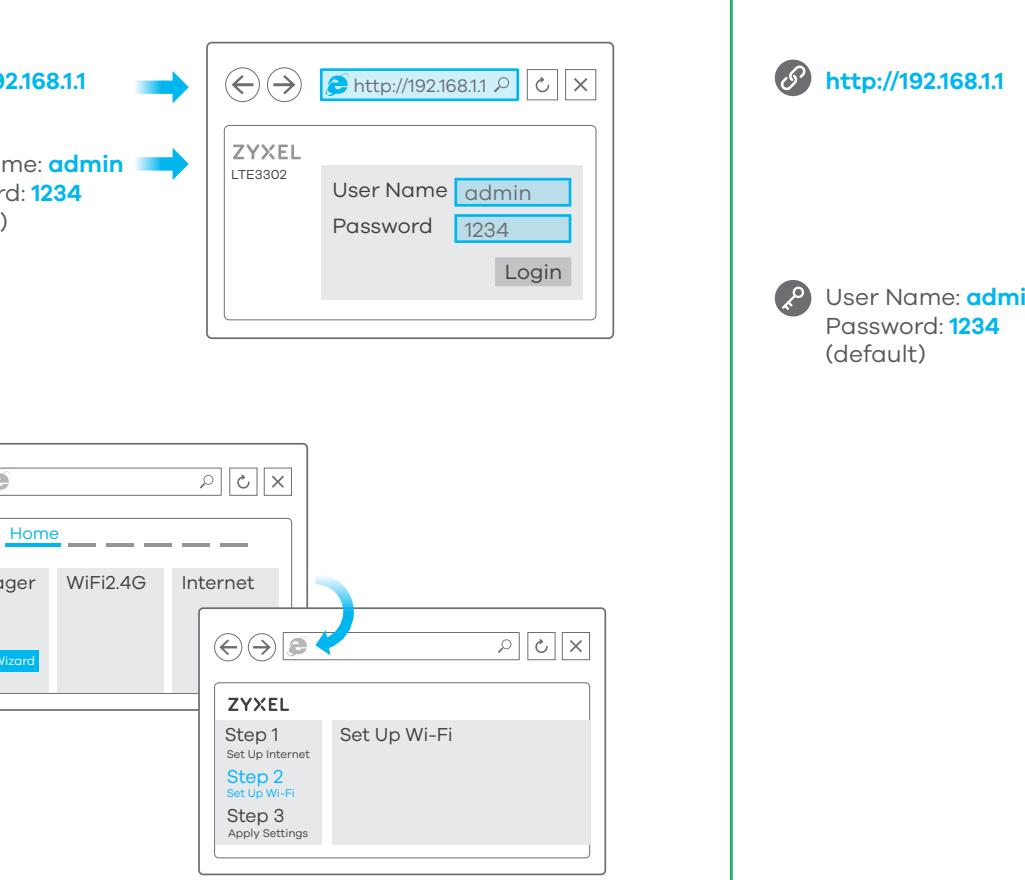

Via a Mobile Device



Optional Accessories

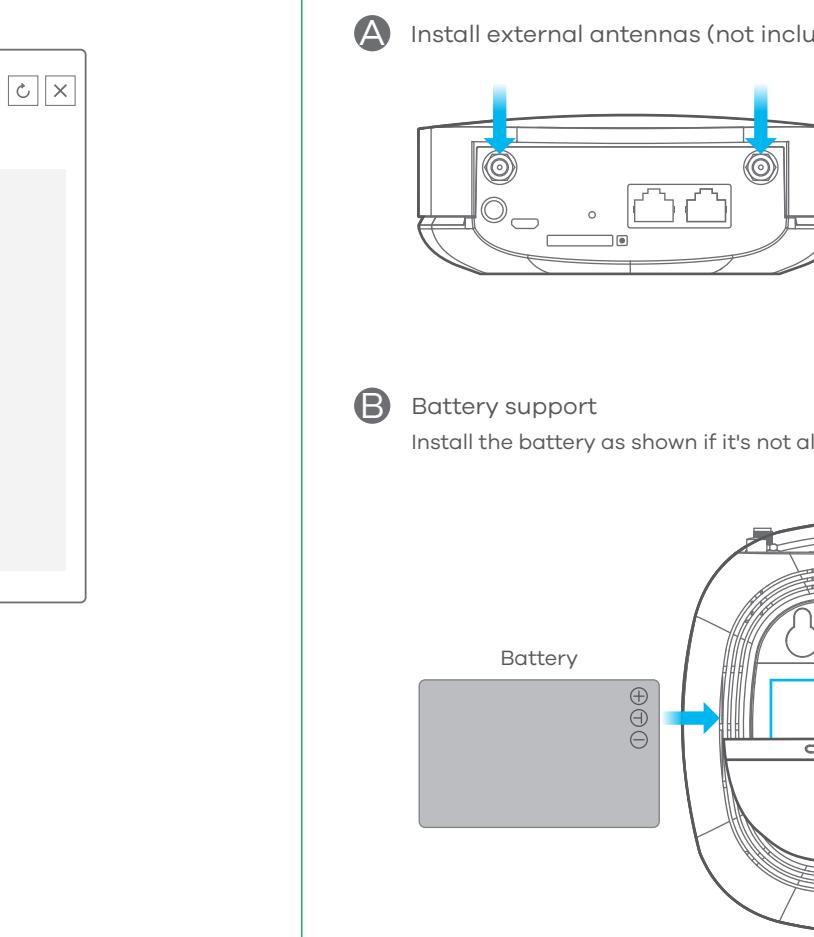

Troubleshooting

Power and Hardware Connections

- Make sure the SIM card is correctly installed in the LTE3302.
- Make sure the micro USB cable is connected correctly.

LTE3302 Access and Login

- Make sure you are using the correct IP address.
• The default IP address is 192.168.1.1.
- If you changed the IP address and have forgotten it, you have to reset the device to its factory defaults.
- Make sure your Internet browser does not block pop-up windows and has JavaScript enabled.
- Make sure you have entered the user name and password correctly.
The default password is 1234. If this does not work, you have to reset the device to its factory defaults.

Internet Access

- Make sure you insert an LTE SIM card into the card slot before turning on the LTE3302.
- Log into the web configurator (admin, 1234 are the default username and password).
- Click **Setup Wizard**, then check the setting in **Step 1 Setup Internet**.
- Make sure your LTE SIM card's account is valid and has an active data plan.
- If you are using a pre-paid SIM card, insert the SIM card on another LTE device to check if the SIM card still works. If the SIM card works without any problems on another LTE device, contact the vendor. If the SIM card doesn't work, contact your service provider.

Wi-Fi Connections

- Make sure the wireless LAN is enabled on the LTE3302.
- Make sure the wireless adapter (installed on your computer) is working properly.

2G/3G/LTE Connections

- Make sure your SIM card's account is valid and has an active data plan.
- Install the 2G/3G/LTE external antennas to strengthen the cellular signal.

Quick Start Guide

LTE3302-M432
4G LTE Indoor Router



ZYXEL SLOVENŠČINA | SLOVENČINA | БЪЛГАРСКИ |
РУССКИЙ

Support Information

Slovakia +421 220 861 848
support@sk.zyxel.com

Russia +7 (495)539 9935
info@zyxel.ru

Bulgaria support@zyxel.bg




See the User's Guide at www.zyxel.com for more information,
including safety warnings and customer support.

EU Importer
Zyxel Communications A/S
Generatorvej 8D, 2860 Søborg, Denmark.
<http://www.zyxel.dk>

US Importer
Zyxel Communications, Inc
1130 North Miller Street Anaheim, CA 92806-2001
<http://www.us.zyxel.com>

Copyright © 2017 Zyxel Communications Corp. All Rights Reserved.


Hardware Installation

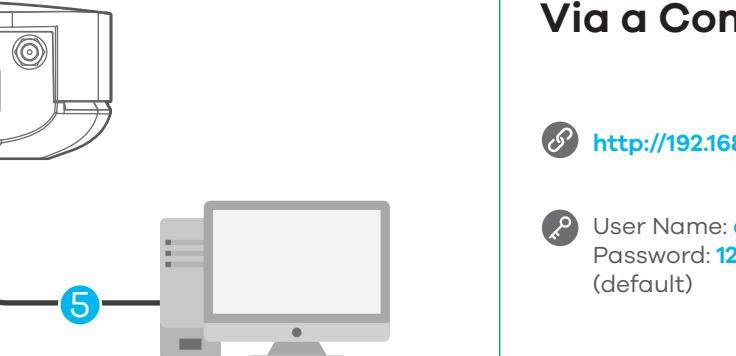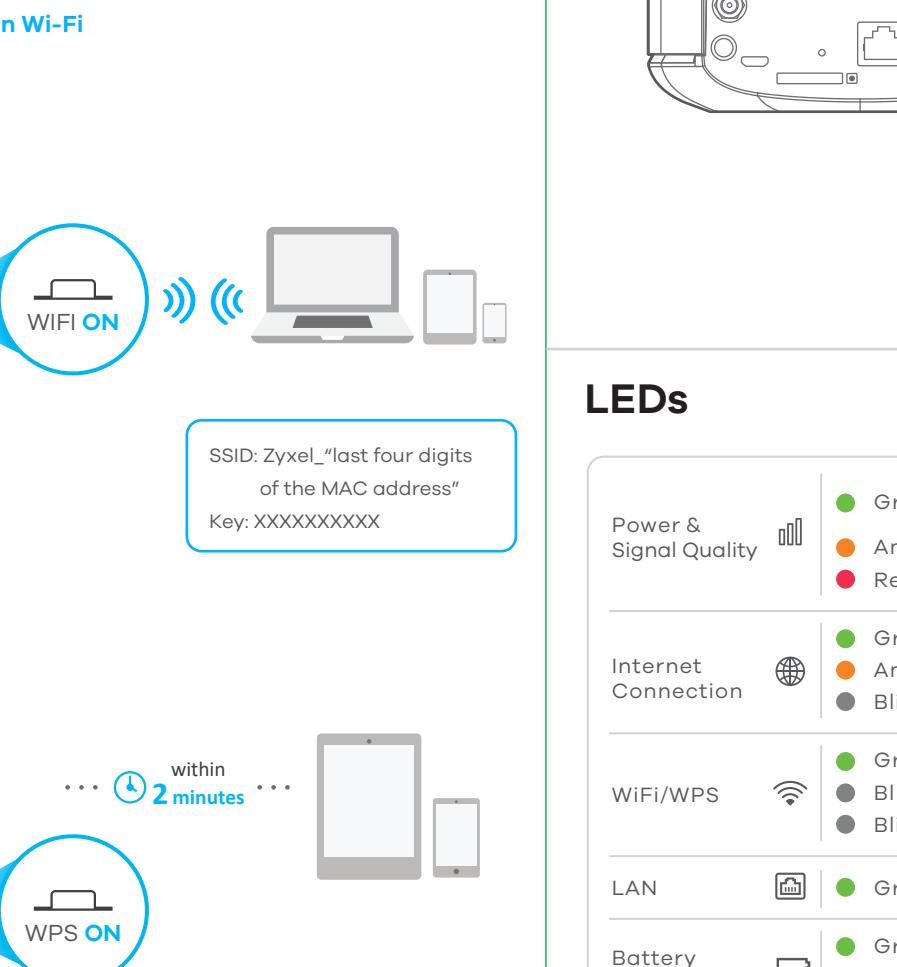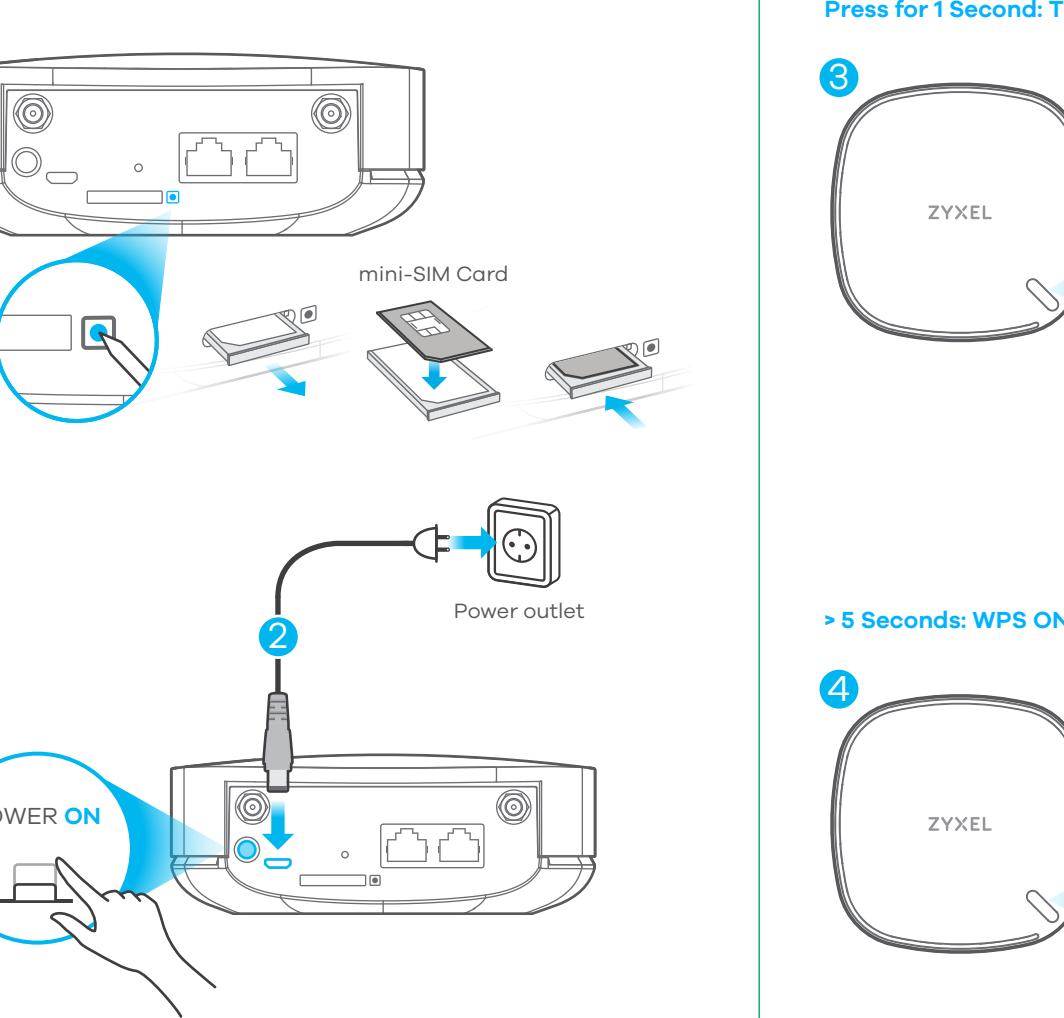

LEDs

Power & Signal Quality	Green - Power on Amber - Signal strength: Fair Red - Signal strength: Poor
Internet Connection	Green - Successful 4G network connection Amber - Successful 2G/3G network connection Blinking - New SMS
WiFi/WPS	Green - 2.4GHz WLAN on Blinking (fast) - Sending and receiving data Blinking (slow) - WPS on
LAN	Green - LAN connection ready
Battery (Optional)	Green - Battery fully charged Amber - Battery charging


Via a Computer or Notebook

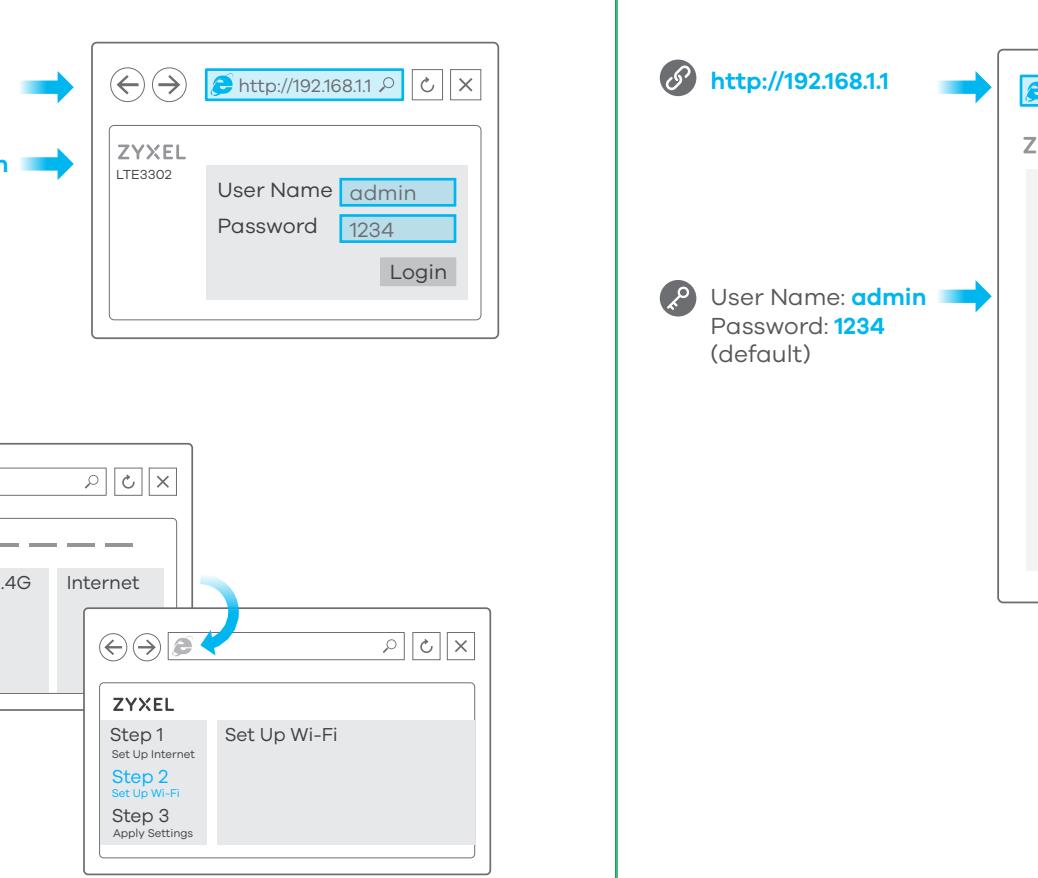

Via a Mobile Device



Optional Accessories

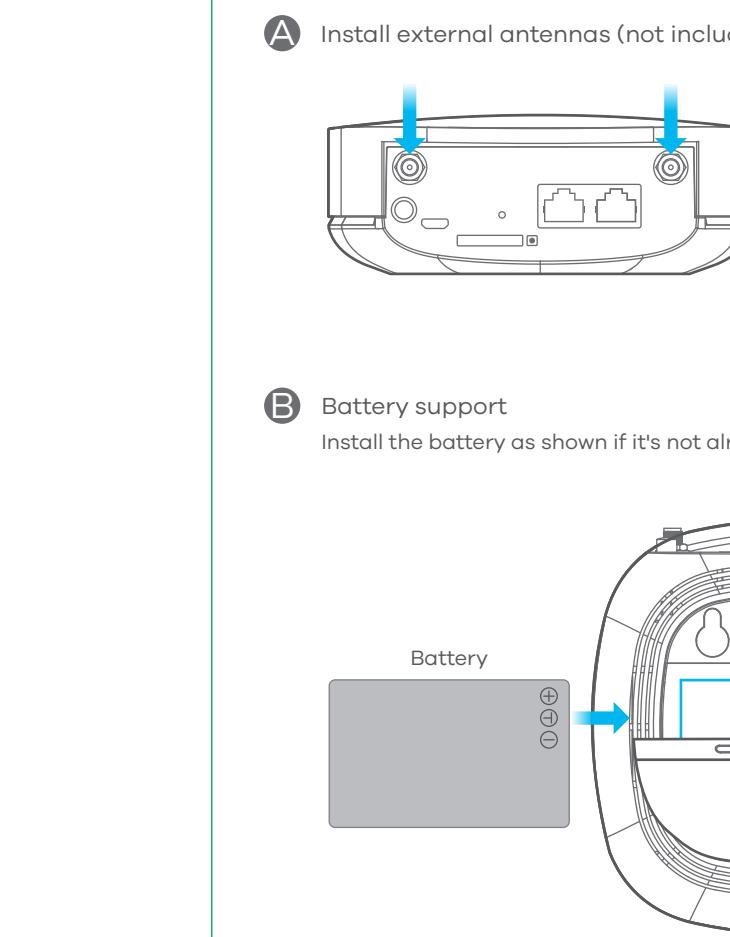

Troubleshooting

Power and Hardware Connections

- Make sure the SIM card is correctly installed in the LTE3302.
- Make sure the micro USB cable is connected correctly.

LTE3302 Access and Login

- Make sure you are using the correct IP address.

• The default IP address is 192.168.1.1.

- If you changed the IP address and have forgotten it, you have to reset the device to its factory defaults.

Internet Access

- Make sure you insert an LTE SIM card into the card slot before turning on the LTE3302.

- Log into the web configurator (admin, 1234 are the default username and password).

Click **Setup Wizard**, then check the setting in **Step 1 Setup Internet**
- Make sure your LTE SIM card's account is valid and has an active data plan.
- If you are using a pre-paid SIM card, insert the SIM card on another LTE device to check if the SIM card still works. If the SIM card works without any problems on another LTE device, contact the vendor. If the SIM card doesn't work, contact your service provider.

Wi-Fi Connections

- Make sure the wireless LAN is enabled on the LTE3302.
- Make sure the wireless adapter (installed on your computer) is working properly.

2G/3G/LTE Connections

- Make sure your SIM card's account is valid and has an active data plan.
- Install the 2G/3G/LTE external antennas to strengthen the cellular signal.