

# Canon PIXMA MG3600 series

## Getting Started 2



### Smartphone/Tablet (iOS/Android)

#### 1. Install Canon PRINT Inkjet/SELPHY to your smartphone/tablet.

**iOS** : Search "Canon PRINT" in App Store.  
**Android** : Search "Canon PRINT" in Google Play.



Or access the website by scanning the code on the right.

\* This procedure is described based on Canon PRINT Inkjet/SELPHY 2.0.0. In other versions, follow the application instructions to complete the setup.

#### 2. Check your network configuration.

Turn on Wi-Fi on your smartphone or tablet before you start.

##### iOS

- Using wireless router **A**
- Not using/having wireless router (Connecting printer to device directly) **B**

##### Android

\* If you connect your device to the printer directly, you may be unable to access the Internet with your device or may be charged for an Internet connection.

▶▶▶ Proceed to right side. ▶▶▶

#### A iOS Using wireless router

- Tap [Settings] on the home screen.
- Tap [Canon\_ij\_XXXX] on the Wi-Fi setting.
- Tap [PRINT] which was installed.
- Tap the printer icon on the top left of the screen.
- Tap [Register Printer].
- Tap [Printer Setup].
- Tap [Connect via wireless router (recommended)].

If [Canon\_ij\_XXXX] does not appear on the list, see NOTE to setup the printer and wait until [Canon\_ij\_XXXX] appears. XXXX varies depending on your printer.

The extended survey screen appears on the first startup.

- Tap [OK].
- Select the SSID of your wireless router connected to your device.
- When a password entry screen appears, enter the password for your wireless router and tap [OK].
- Wait for a while until the printer is detected.
- When the printer is detected, tap your printer's model name.
- Enter the printer name as needed and tap [OK].
- When the printer information appears on the screen, the setup is complete.

#### B iOS Not using/having wireless router

- Tap [Settings] on the home screen.
- Tap [Canon\_ij\_XXXX] on the Wi-Fi setting.
- Tap [PRINT] which was installed.
- Tap the printer icon on the top left of the screen.
- Tap [Register Printer].
- Tap [Printer Setup].
- Tap [Direct Connection].

If [Canon\_ij\_XXXX] does not appear on the list, see NOTE to setup the printer and wait until [Canon\_ij\_XXXX] appears. XXXX varies depending on your printer.

- Tap [OK].
- Check the SSID and password and tap [Copy Password].
- Tap [Settings] on the home screen.
- Tap the same SSID as checked in ②.
- Paste the password and tap [Join].
- Tap [PRINT].
- Tap [Done].

- Wait for a while until the printer is detected.
- When the printer is detected, tap your printer's model name.
- Enter the printer name as needed and tap [OK].
- When the printer information appears on the screen, the setup is complete.

#### C Android

- Tap [PRINT] which was installed.
- Tap [Yes].
- Follow the on-screen instruction.
- Wait for a while until the printer is detected.
- When the printer is detected, tap your printer's model name.
- Enter the printer name as needed and tap [OK].
- When the printer information appears on the screen, the setup is complete.

If the screen in ② does not appear, see NOTE to setup the printer and wait until the screen appears.

If none of these screens appears, see "If Select Router screen appears".

Make sure the SSID of the desired wireless router appears and tap [Yes].

Enter the password of the wireless router and tap [OK].

If the printer is not detected and the Alarm lamp flashes on the printer, press the [Color] or [Black] button and start over from ①.

If Select Router screen appears:

- Do the following if this screen appears.
- When the SSID of the desired wireless router appears, tap it. Make sure your device is connected to the same SSID.
- If the SSID of the desired wireless router does not appear or you are not sure, tap [If no target wireless router].

#### Using AirPrint or Google Cloud Print

Do the following to use AirPrint or Google Cloud Print.

- Press the [Stop] button on the printer.
- Connect the printer to your network.
- Register the printer to Google Cloud Print (if you use Google Cloud Print).

#### NOTE

**iOS** If [Canon\_ij\_XXXX] does not appear:  
**Android** If a message saying ["Printer is not registered. Perform printer setup?"] does not appear at Canon PRINT Inkjet/SELPHY startup:  
 Do the following on the printer.

- Press and hold down the Wi-Fi button (A) on the printer until the ON lamp (B) starts flashing.
- Press the [Color] button (C) and then the Wi-Fi button (A).
- Make sure the Wi-Fi lamp (D) is flashing fast and the ON lamp (B) is lit.

You can connect the printer to a PC/smartphone/tablet and install software.

Have you finished all the steps in the Getting Started 1? Please read this manual after completing the printer setup in the Getting Started 1.

Proceed to connect printer to



### PC (Windows/Mac OS)

#### 1. Download setup file.

- Access the following URL in your web browser.  
<http://canon.com/ijsetup>
- Click [Set Up].
- Select the region where you purchased the product.
- Select your product.
- Click [Connecting to Computer, Smartphone or Tablet].
- Select your operating system.
- Click [Download] to download the setup file.
- If a download security warning appears, allow your web browser to continue downloading.
- Open the downloaded file and click [Start Setup].
- Follow the on-screen instructions to proceed the setup.

Windows PC users: you can also open the file from the setup CD-ROM.

The screen in ③ will appear when you open the file from the CD-ROM. Perform the remaining steps in the same way as on the website.

#### 2. Select connection method.


Select a printer connection method and click [Next].




**Wireless LAN Connection**  
 Connect the printer to your computer without any cables.



**USB Connection**  
 Connect the printer to your computer with a USB cable. This is the easiest way. You only can connect one printer.  
 \* Prepare a USB cable separately.

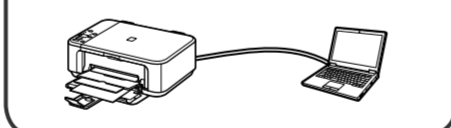

Follow the on-screen instructions to proceed the setting.  
 When the screen below appears, the printer is ready to use.  
 Click [Next] to continue installing the software.

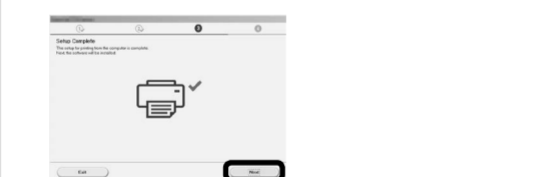

#### 3. Install software.

When the screen below appears, select the software you want to install and click [Next].



Follow the on-screen instructions to proceed the setting.

Now your computer is connected to printer.

# מדריך למתחיל 2



## טלפון חכם/מחשב לוח (iOS/Android)

### 1. התקנת Canon PRINT Inkjet/SELPHY בטלפון החכם/מחשב הלוח.

**iOS:** חפש "Canon PRINT" בחנות האפליקציות App Store.  
**Android:** חפש "Canon PRINT" בחנות האפליקציות Google Play.

או גש לאתר האינטרנט על-ידי סריקת הקוד שמשמאל.

\* תיאור תהליך זה מבוסס על מבוסס על Canon PRINT Inkjet/SELPHY 2.0.0. בגרסאות אחרות, פעל בהתאם להוראות היישום כדי להשלים את ההגדרה.

### 2. בדיקת הגדרת התצורה של הרשת.

לפני שתתחיל, הפעל את רשת Wi-Fi בטלפון החכם או במחשב הלוח שלך.

**iOS**

- משתמש בנתב אלחוטי
- לא משתמש/מחזיק בנתב אלחוטי (חיבור המדפסת למכשיר ישירות)

**Android**

\* אם תחבר את מכשירך ישירות למדפסת, ייתכן שלא תוכל לגשת לאינטרנט דרך המכשיר או שתחויב בגיבוי החיבור לאינטרנט.

**התקדם שמאלה.**

האם השלמת את כל השלבים במדריך למתחיל 1?  
 אלא קרא מדריך זה אחרי שהשלמת את הגדרת המדפסת במדריך למתחיל 1.

התקדם כדי לחבר את המדפסת אל מחשב

**מחשב**

**טלפון חכם או מחשב לוח**

## מחשב (Windows/Mac OS)

### 1. הורדת קובץ ההתקנה.

1 גש אל כתובת ה-URL הבאה בדפדפן האינטרנט שלך.  
<http://canon.com/ijsetup>

2 לחץ על [Set Up] (הגדרה).

3 בחר את האזור שבו רכשת את המוצר.

4 בחר את המוצר שלך.

5 הקש על [Connecting to Computer, Smartphone or Tablet] (התחברות למחשב, טלפון חכם או מחשב לוח).

6 בחר את מערכת ההפעלה.

7 לחץ על [Download] (הורדה) כדי להוריד את קובץ ההתקנה.

\* אם מופיעה אזהרת אבטחה בהורדה, אפשר לדפדפן האינטרנט להמשיך את ההורדה.

8 פתח את הקובץ שהורדת ולחץ על [Start Setup] (התחל התקנה).

9 פעל בהתאם להוראות שבמסך כדי להמשיך בהגדרה.

### 2. בחירת שיטת ההתחברות.

בחר שיטת התחברות למדפסת ולחץ על [Next] (הבא).

פעל בהתאם להוראות שבמסך כדי להמשיך בהגדרות. אחרי שהמסך שלהלן מופיע, המדפסת מוכנה לשימוש בלבד.

הקש על [Next] (הבא) כדי להמשיך בהתקנת התוכנה.

USB חיבור: חבר את המדפסת למחשב באמצעות כבל USB. זוהי הדרך הקלה ביותר. ניתן לחבר מדפסת אחת בלבד. \* הקן כבל USB בנפרד.

### 3. התקנת התוכנה.

אחרי שיופיע המסך שלהלן, בחר את תוכנה שברצונך להתקין ולחץ על [Next] (הבא).

פעל בהתאם להוראות שבמסך כדי להמשיך בהגדרות. כעת המחשב מחובר למדפסת.

### iOS A

#### משתמש בנתב אלחוטי

- הקש על [Settings] (הגדרות) במסך הבית.
- הקש על [Canon\_ij\_XXXX] בהגדרת ה-Wi-Fi.
- הקש על [PRINT] (הדפסה) שהותקן.
- הקש על סמל המדפסת בצדו השמאלי של המסך.
- הקש על [Register] (רישום) [Printer] (מדפסת).
- הקש על [Printer Setup] (הגדרת מדפסת).
- הקש על [Connect via wireless router] (הקש על [recommended] (התחבר באמצעות נתב אלחוטי (מומלץ)).

אם הכיתוב [Canon\_ij\_XXXX] לא מופיע ברשימה, ראה הערה להגדרת המדפסת והמתן עד שהכיתוב [Canon\_ij\_XXXX] יופיע. XXXX משתנה בתלות במדפסת.

מסך הסקירה המורחבת מופיע בהפעלה הראשונה.

בחר את ה-SSID של הנתב האלחוטי שמחובר להתקן שלך.

10 כאשר מופיע מסך הזנת סיסמה, הזן את הסיסמה לנתב האלחוטי שלך והקש על [OK] (אישור).

11 המתן זמן מה עד שהמדפסת תזוהה.

12 אחרי שהמדפסת זוהתה, הקש על שם הדגם של המדפסת.

13 הזן את שם המדפסת לפי הצורך והקש על [OK] (אישור).

14 כאשר פרטי המדפסת מופיעים במסך, ההגדרה הושלמה.

אם המדפסת לא זוהתה ונורית התראה מהבהבת במדפסת, לחץ על הלחצן [Color] (צבע) או על הלחצן [Black] (שחור) והתחל שוב משלב 1.

### iOS B

#### לא משתמש/מחזיק בנתב אלחוטי

- הקש על [Settings] (הגדרות) במסך הבית.
- הקש על [Canon\_ij\_XXXX] בהגדרת ה-Wi-Fi.
- הקש על [PRINT] (הדפסה) שהותקן.
- הקש על סמל המדפסת בצדו השמאלי של המסך.
- הקש על [Register] (רישום) [Printer] (מדפסת).
- הקש על [Printer Setup] (הגדרת מדפסת).
- הקש על [Direct Connection] (חיבור ישיר).

אם הכיתוב [Canon\_ij\_XXXX] לא מופיע ברשימה, ראה הערה להגדרת המדפסת והמתן עד שהכיתוב [Canon\_ij\_XXXX] יופיע. XXXX משתנה בתלות במדפסת.

בדוק את ה-SSID והסיסמה והקש על [Copy Password] (העתק סיסמה).

10 הקש על [Settings] (הגדרות) במסך הבית.

11 הקש על אותו SSID כפי שבדק בסעיף 9.

12 הדבק את הסיסמה והקש על [Join] (הצטרף).

13 כאשר פרטי המדפסת מופיעים במסך, ההגדרה הושלמה.

14 הקש על [Done] (בוצע).

15 המתן זמן מה עד שהמדפסת תזוהה.

16 אחרי שהמדפסת זוהתה, הקש על שם הדגם של המדפסת.

17 הזן את שם המדפסת לפי הצורך והקש על [OK] (אישור).

18 כאשר פרטי המדפסת מופיעים במסך, ההגדרה הושלמה.

### Android C

- הקש על [PRINT] (הדפסה) שהותקן.
- הקש על [Yes] (כן).
- פעל בהתאם להוראות שבמסך.
- המתן זמן מה עד שהמדפסת תזוהה.
- אחרי שהמדפסת זוהתה, הקש על שם הדגם של המדפסת.
- הקש על שם המדפסת לפי הצורך והקש על [OK] (אישור).
- כאשר פרטי המדפסת מופיעים במסך, ההגדרה הושלמה.

אם אף אחד מהמסכים הללו לא מופיע, ראה "אם מופיע המסך Select Router (בחירת נתב)".

דאג שה-SSID של הנתב האלחוטי הרצוי מופיע והקש על [Yes] (כן).

הזן את סיסמת הנתב האלחוטי והקש על [OK] (אישור).

אם המדפסת לא זוהתה ונורית התראה מהבהבת במדפסת, לחץ על הלחצן [Color] (צבע) או על הלחצן [Black] (שחור) והתחל שוב משלב 2.

אם מופיע מסך זה, בצע את הפעולות הבאות:

- כאשר מופיע ה-SSID של הנתב האלחוטי הרצוי, הקש עליו.
- דאג שההלחצן שלך מחובר לאותו SSID.
- אם ה-SSID של הנתב האלחוטי הרצוי לא מופיע, או אם אינך בטוח, הקש על [If no target wireless router] (אם אין נתב אלחוטי המוגדר כיעד).

### שימוש ב-AirPrint או ב-Google Cloud Print

בצע את הפעולות הבאות כדי להשתמש ב-AirPrint או ב-Google Cloud Print.

- לחץ על הלחצן [Stop] (עצירה) במדפסת. חבר את המדפסת לרשת.
- רשום את המדפסת ב-Google Cloud Print (אם אתה משתמש ב-Google Cloud Print).

בצע את הפעולות הבאות במדפסת.

1 לחץ לחיצה ממושכת על הלחצן Wi-Fi (A) במדפסת עד שהנורית הפעלה (B) תתחיל להבהב.

2 לחץ על הלחצן [Color] (צבע) (C) ולאחר מכן על הלחצן Wi-Fi (B) במהירות וכי הנורית הפעלה (D) דולקת.

3 ודא שהנורית Wi-Fi (D) מהבהבת במהירות וכי הנורית הפעלה (B) דולקת.