PHILIPS

Shaver

フィリップス 電動シェーバー

品番 **S6680/26**

取扱説明書

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください。

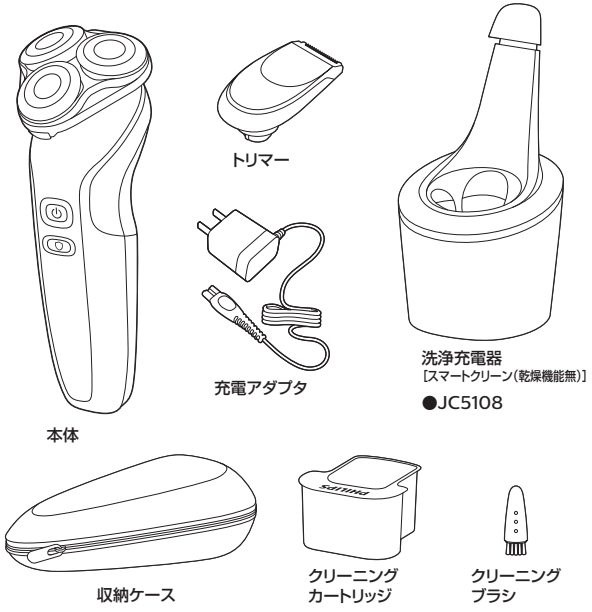

※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ

初めてご使用になる際は、ご使用前に充電してください。

洗浄充電器付きモデルお買い上げのお客様へ

●洗浄充電器に関して

出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部をクリックしてロックをはずしてからシェーバーをセットしてください。

●クリーニングカートリッジに関して

フィリップスの専用クリーニングカートリッジをご使用ください。フィリップスの専用クリーニング液(ボトルタイプ)を入れてご使用いただくことはできません。

目　次

●は　じ　め　に

商品のご確認 …… 1
目次 …… 3
必ずお守りください …… 4・5
各部の名称 …… 6・7
LED表示について …… 8・9
充電の仕方 …… 10

●ご使用方法

シェービングの仕方 …… 11～13
トリマーの使い方 …… 14
お手入れ方法 …… 15～19
保管の仕方 …… 19
刃の交換 …… 20

●廃棄について

シェーバーを廃棄するとき …… 21

●困ったとき

故障かな?と思ったら …… 22・23

●英　文　解　説

Guidance in English …… 24～53

●保　　証

保証とアフターサービス …… 55
仕様 …… 56
無料修理規定 …… 58
保証書 …… 最終ページ

安全上のご注意

必ずお守りください

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
●誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について

記号は、「警告、注意」を示します。
図の中や近くに具体的な注意内容を示します。

警告	人が死亡または重傷を負う可能性が想定される内容。
注意	人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例

- 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容（左図の場合は分解禁止）を示します。
- 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容（左図の場合は電源プラグをコンセントから抜くこと）を示します。

警告

●シェーバー本体・洗浄充電器ならびに充電アダプタは改造しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はフィリップスサポートセンターにお問い合わせください。

●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。

●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。

●充電アダプタ、洗浄充電器を水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。

●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。

●乳幼児の手の届くところに本製品を置かないでください。

●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。

●自分で意思表示ができない人（幼児を含む）に使用させないでください。また、お体の不自由な人だけでは使用しないでください。

⚠ 注　意

●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の充電アダプタ部を持って引き抜いてください。感電やショートして発火することがあります。

●充電時または洗浄充電器の使用時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。

●刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。

●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。

●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。

●充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。

使　用　上　の　ご　注　意

1. 本製品はヒゲ（あごヒゲ、口ヒゲ、もみあげなど）の長さを整えたり、シェービングするためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。
3. 60℃以上の水でシェーバーを洗浄しないでください。
4. 本製品の使用、充電、保管は室温5℃～35℃の環境下で行ってください（尚、低温や高温で充電すると、充電池の寿命が短くなります）。
5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。
6. シェービングユニットの清掃や着脱は、必ず電源をOFFにしてから行ってください。
7. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェービングヘッドと交換してください。
8. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
9. 乳幼児の手の届かないところに保管してください。
10. シェービングユニットは、クリーニング表示（蛇口マーク）が表示された場合、お手入れ方法（P15～19）に従って掃除してください。
11. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。
12. クリーニングカートリッジ内のクリーニング液を万一飲み込んだり、目に入ったりした場合は医師に相談してください。
13. 洗浄充電器は平らな所に設置してご使用ください。
14. クリーニングカートリッジ内にクリーニング液が入っている状態で、洗浄充電器を移動させないでください。
15. プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

各部の名称

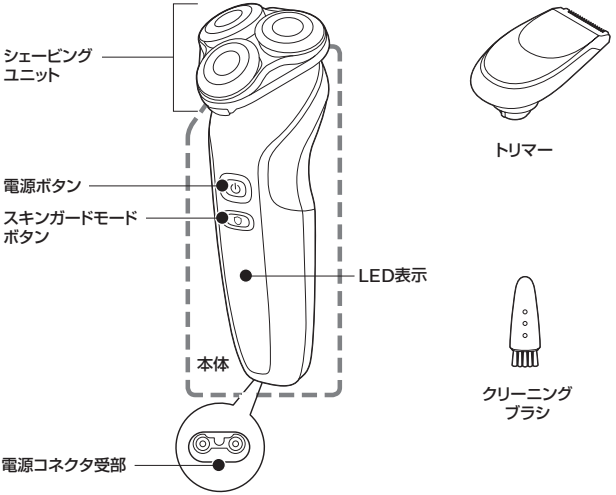

●シェービングユニット

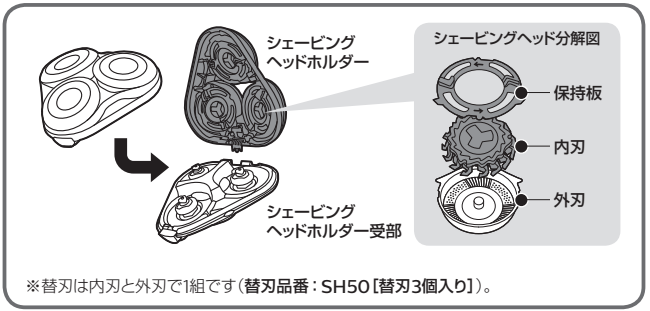

※替刃は内刃と外刃で1組です(**替刃品番：SH50［替刃3個入り］**)。

出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部を押してロックをはずしてからシェーバーをセットしてください。

洗浄充電器（JC5108）
［スマートクリーン（乾燥機能無）］

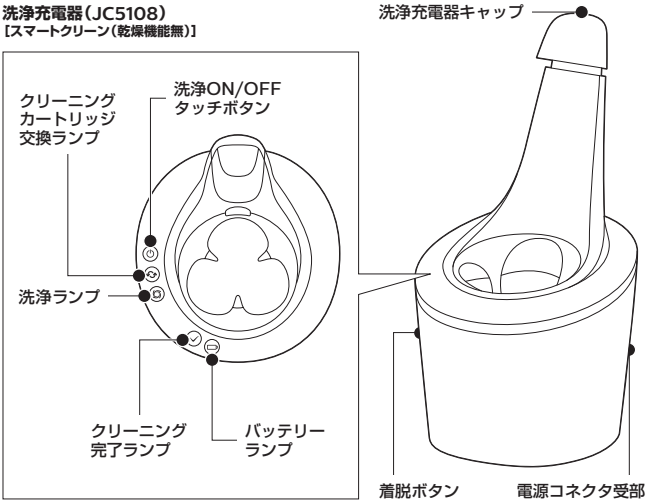

クリーニング
カートリッジ

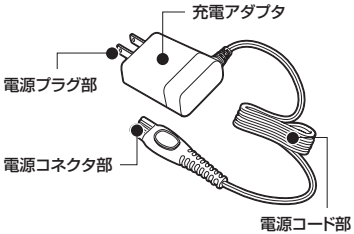

収納ケース

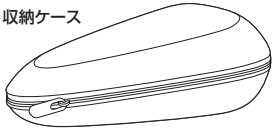

初めてお使いになるときや、長い間ご使用にならなかったときは、LED表示が出るまでに時間がかかる場合があります。

LED表示について

主な表示（本体）

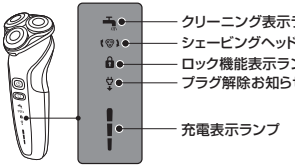

●ロック機能（カギマークが表示されていると電源は入りません）
電源ボタンを約3秒長押しすると、カギマークが表示されてロックがかかります。再度約3秒長押しすると解除できます。充電アダプタに接続するか、洗浄充電器に本体を置くと、ロックは自動的に解除されます。

●充電表示（充電アダプタで充電する場合）　充電中は一番下の充電表示ランプが白色に点滅します。点灯に変わると、1つ上のランプが順次、点滅～点灯に変わります。

●充電完了表示　充電が完了すると、白色の充電表示ランプが全て点灯します。満充電後、約30分経過すると充電表示ランプが消えます。
※充電中に電源ボタンを押すと、プラグ解除お知らせ表示ランプが点滅します。

●充電催促表示　動作中に充電残量が少なくなると（使用可能時間が残り約5分以下）、充電表示ランプがオレンジ色に点滅します。電源をOFFにすると、充電表示ランプが数秒間オレンジ色に点滅後、消灯します。

●シェービングヘッド交換表示　電源をOFFにした後にシェービングヘッドの交換マークが点灯すると、交換時期です。シェービングヘッドを交換してください（P20参照）。

●クリーニング表示　電源をOFFにすると、クリーニングをうながすために蛇口マークが点滅します。「お手入れ方法」（P15～19）をご参照ください。

●残量表示　満充電の時は全てのランプが点灯し、充電残量が少なくなるとともに充電表示ランプの表示が下がっていきます。電源ボタンを押した際に充電表示ランプが数秒間点灯します。

●プラグ解除お知らせ表示　充電アダプタに接続している時に電源ボタンを押すと白色に点滅します。ご使用の際は、充電アダプタをシェーバー本体からはずしてご使用ください。

洗浄充電器の主な表示説明

●JC5108

●洗浄ランプ

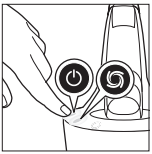

洗浄中は洗浄ランプが点灯します。
洗浄時間は約10分です。

●クリーニング完了ランプ

クリーニングプログラムが終了すると点灯します。

●バッテリーランプ

シェーバーの充電中はバッテリーランプが点滅し、
充電が完了すると点灯します
（充電時間は約1時間です）。

●クリーニングカートリッジ交換ランプ

クリーニングカートリッジの交換をうながすために
赤色に点滅します。

浴室で充電をしないでください。

お客様による充電池の交換はできません。

この商品は通常1時間充電です。

満充電で約60分使用できます。

充電の仕方

※充電をしながらシェービングはできません。

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがありますが、そのまま充電すると充電表示ランプが点滅します。海外(100～240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン電池を使用しているので、ご使用の都度充電をしても充電池の寿命には影響ありません。

充電アダプタで充電する場合

1 シェーバー本体の電源がOFFになっていることを確認してください。

2 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。

3 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。

4 充電が完了すると充電表示ランプが全て点灯します。
※満充電後、約30分経過すると充電表示ランプが消えます。

クイックチャージ

充電残量が0の状態で充電アダプタで充電すると、シェービング1回分が急速充電されます。

※クイックチャージ中は3つの充電表示ランプが順番に点滅します。

※クイックチャージが完了すると通常の充電が行われます。その際、一番下の充電表示ランプが点滅します。点灯に変わると、1つ上のランプが順次、点滅～点灯に変わります。

洗浄充電器で充電する場合

1 充電アダプタの電源コネクタ部を洗浄充電器の電源コネクタ受部に差し込みます。

2 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。

出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部を押してロックをはずしてからシェーバーをセットしてください。

3 シェーバー本体のLED表示を後ろ向きにし、シェービングユニットを下向きにして洗浄充電器にセットします(図❶)。洗浄充電器キャップを下に押すとシェーバーがロックされ通電されます(図❷)。充電が開始されると洗浄充電器のバッテリーランプと洗浄ON/OFFタッチボタンが点滅します。

4 充電が完了するとバッテリーランプが点灯します。
※シェーバーを取り外す際にはもう一度キャップ部を押してロックをはずしてから取り外してください。



※シェーバーをセットするときに刃を傷つけないよう充分に気をつけてください。

※通常の目安として満充電で1日3分使用し、約20日間使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。

⚠ 注意

- 専用の充電アダプタ・洗浄充電器以外での充電は行わないでください。
- 長期間使用しない場合は、充電池が過放電や液漏れして使えなくなることがあります。3～4カ月に一度は充電してください。
- 本製品を24時間以上コンセントに接続したままにしないでください。

シェービングの仕方（ドライ）

肌が乾いた状態でのシェービングの仕方です。

ご使用の際は本体から充電アダプタを抜いてご使用ください。接続されていると作動しません。

⚠ 警告　シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- ●モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ●ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ●ご使用の前に外刃の破れや変形がないか確認してください（外刃に破れや変形があると肌を傷つける原因になります）。
- ●ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。

1 電源ボタンを押し、電源をONにします。

※カギマークが表示される場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。

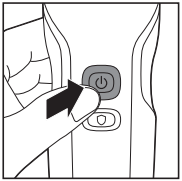

2 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。

3 シェービング後は電源ボタンを押し、電源をOFFにします。

スキンガードモード設定

通常使用時と比べて約10%スピードダウンすることで、さらに肌に優しいシェービングに適したモードです。
シェーバーの電源をONにした状態でスキンガードモードボタンを押すとスキンガードモードをご使用いただけます。再度スキンガードモードボタンを押すとスキンガードモードを解除できます。

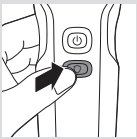

上手に剃るには

肌に強く押しつけるのではなく、軽く押しあてて円を描くように回転させながら剃るのがコツです。

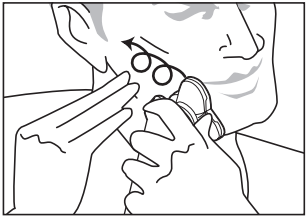

ほお
肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

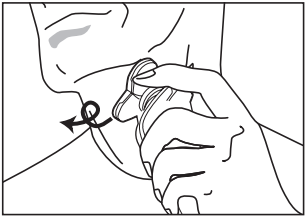

あごの裏側
刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

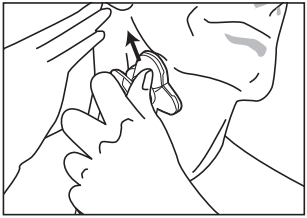

ほおの奥から首筋
片方の手で肌を後ろに引っ張りながら剃ります。

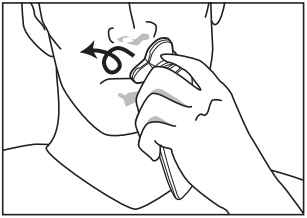

鼻の下
鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2〜3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェービングの仕方（ウェット）

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を実感しながら、なめらかなシェービングができます。

警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- ●モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ●ご使用の前に外刃の破れや変形がないか確認してください（外刃に破れや変形があると肌を傷つける原因になります）。
- ●ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。
- ●石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。

1 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2 シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3 電源ボタンを押し、電源をONにします。

※カギマークが表示される場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。

4 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。
シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。

※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。

5 シェービング後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います（P15～19「お手入れ方法」）。

※シェービングフォームやシェービングジェルの使用後に、洗浄充電器で洗浄をされる場合は、ぬるま湯または水でしっかりと洗い流してください。

【重要】

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

トリマーはヘアーライン、もみあげ、
ヒゲなどを整えるのに便利です。

トリマーの使い方

1 シェービングユニットのはずし方

シェービングユニットを本体からはずします。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確認してください。

2

トリマーの突起部(図❶)をシェーバー上部の溝(図❷)に合わせ、カチッと音がするまで押し込み(図❸)、本体に取り付けます。電源をONにすると、トリマー先端の刃が往復してカットします。

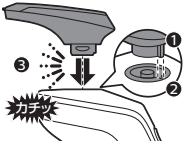

3

鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。

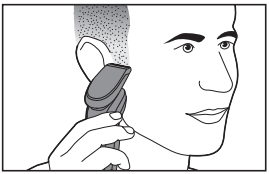

4 シェービングユニットのつけ方

トリマーをはずし(図❶)、シェービングユニットの突起部(図❷)をシェーバー上部の溝(図❸)に合わせ、カチッと音がするまで押し込み(図❹)、本体に取りつけます。

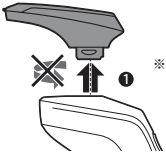

※トリマーは、回さずにまっすぐ引き抜いてください。

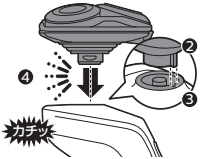

※トリマーは、使用後必ずお手入れしてください。

※トリマーの切れ味を保つため、使用後は必ずぬるま湯または水ですすぎ洗いをしてください(P19「トリマーのお手入れ方法」)。

注意 強く押し当て過ぎると肌を傷めますのでご注意ください。

お手入れ方法

シェービングユニットはご使用の都度、水洗いによるお手入れをしてください。

※洗浄充電器によるお手入れについては、P16をご参照ください。

水洗いによるお手入れ方法

注意

- お手入れの際は、電源をOFFにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

※洗剤は使用しないでください。
※ぬるま湯（40℃前後）でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。
※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。

シェービングユニットのお手入れ方法

1 シェービングユニットをぬるま湯または水で約30秒洗います。

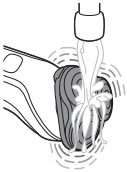

2 シェービングユニットリリースボタンを押し、シェービングユニットを開きます。

3 シェービングユニットをぬるま湯または水で約30秒洗い流します。

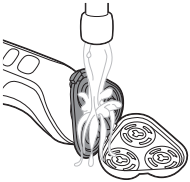

4 シェービングユニットの余分な水を切り、よく乾かします。

5 乾いたことを確認したら、シェービングユニットを閉じてください。

出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部を押してロックをはずしてからシェーバーをセットしてください。

シェーバーをご使用の都度、洗浄充電器で洗浄、充電をしていただいても、シェーバー本体や洗浄充電器に問題はありません。

洗浄充電器を使ったお手入れ方法

※シェービングフォームやシェービングジェルの使用後に、洗浄充電器で洗浄をされる場合は、ぬるま湯または水でしっかりと洗い流してください。
※洗浄充電器には、専用クリーニングカートリッジ以外は使用しないでください。専用クリーニングカートリッジに水を足されたり専用クリーニングカートリッジの代わりに水や他の液を使用すると、故障の原因となりますのでお止めください。
※フィリップスの専用クリーニングカートリッジをご使用ください。フィリップスの専用クリーニング液(ボトルタイプ)を入れてご使用いただくことはできません。

洗浄充電器の準備(クリーニングカートリッジの入れ方)

液漏れする場合がありますので洗浄充電器を傾けないでください。
準備する際には洗浄充電器をしっかりと手でつかんでください。

1 洗浄充電器の電源コネクタ受部に充電アダプタの電源コネクタ部を差し込み、電源プラグ部をご家庭のコンセントに差し込みます。

2 洗浄充電器の側面にある着脱ボタンを押すと(図❶)、洗浄充電器本体が持ち上がります(図❷)。

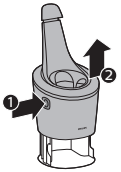

※クリーニングカートリッジご使用の目安として週1回洗浄充電器で洗浄した場合、最大3カ月使用できます。ご使用状況(ヒゲの濃さなど)により変わります。

3 クリーニングカートリッジのシールを剥がし、下図のように洗浄充電器本体に装着し、持ち上げていた洗浄充電器本体をカチッと音がするまで下げます。

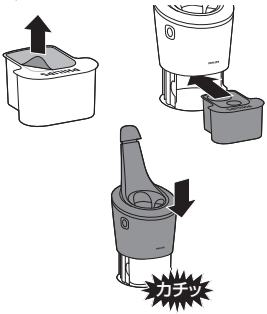

注意

クリーニングカートリッジ内のクリーニング液がこぼれた場合にはすぐ拭き取ってください。皮革製品やフローリングなどに付くと変色する場合がありますので、ご注意ください。

洗浄充電器の動作について

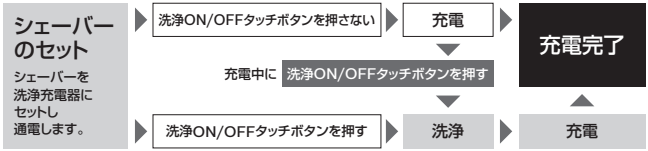

※洗浄中は洗浄ON/OFFタッチボタンを押さないでください。途中で洗浄ON/OFFタッチボタンを押すと誤動作となり故障の原因となります。

洗浄充電器にシェーバー本体をセットする時には必ずシェーバーに余分な水分がついていないことを確認してください。

1 シェーバー本体のLED表示を後ろ向きにし、シェービングユニットを下向きにして洗浄充電器にセットします(図❶)。洗浄充電器キャップを下に押すとシェーバーがロックされ通電されます(図❷)。充電が開始されると洗浄充電器のバッテリーランプと洗浄ON/OFFタッチボタンが点滅します。

2 洗浄ON/OFFタッチボタンを押すと洗浄が始まります。洗浄が始まると洗浄ON/OFFタッチボタンと洗浄ランプが点滅します。

3 洗浄が終了すると洗浄充電器のクリーニング完了ランプが点灯、バッテリーランプが点滅し充電を開始します。充電が完了するとバッテリーランプが点灯します。

※洗浄と充電が完了し30分経過すると洗浄充電器は自動的に電源がOFFになります。

※シェーバーを取り外す際にはもう一度キャップ部を押してロックをはずしてから取り外してください。

4 シェーバーを乾燥させるには、洗浄充電器からシェーバーを取り外し、余分な水分をふきとってからシェービングユニットを開けて、自然乾燥させてください。

⚠ 注意

- スマートクリーンシステムでは洗浄はできますが、消毒はできません。衛生上、シェーバーを他の人と共有しないでください。
- 洗浄中に電源プラグを抜くと洗浄プログラムは中断されます。洗浄するには、再び洗浄ON/OFFタッチボタンを押してください。
- 洗浄中は、洗浄充電器を動かしたり、クリーニングカートリッジを取り外さないでください。
- シェービングユニット内にヒゲクズがたまりすぎたり、長いヒゲがある場合は、きれいに洗浄できない場合があります。P15を参照し、水洗いできれいにしてください。

クリーニングカートリッジの交換方法

クリーニングカートリッジ交換ランプ（P7参照）が赤色に点滅したらクリーニングカートリッジを交換してください。

1 洗浄充電器の側面にある着脱ボタンを押すと（図❶）、洗浄充電器本体が持ち上がります（図❷）。

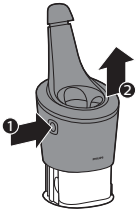

2 クリーニングカートリッジを取り出し残った液は全てシンクに注ぎだしカートリッジ本体は処分してください。

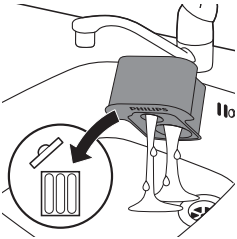

3 新しいクリーニングカートリッジのシールを剥がし、下図のように洗浄充電器本体に装着します。

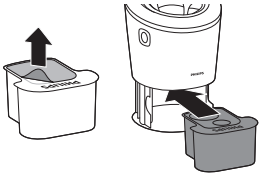

4 持ち上げていた洗浄充電器本体をカチッと音がするまで下げます。

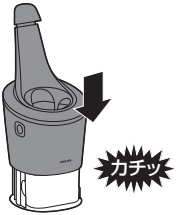

注意 洗浄充電器本体のお手入れは、水で濡らした布を絞って拭き取ってください。

トリマーのお手入れ方法

※トリマーは、使用後必ずお手入れしてください。

1 トリマーを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。

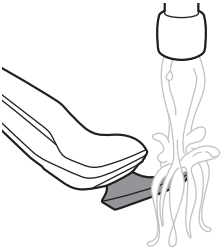

2 シェーバーの電源をOFFにし、トリマーを充分に乾燥させてください。

※トリマーはティッシュペーパーやタオルなどでふかないでください。刃を傷める原因になります。

保管の仕方

シェーバーを保管する前にきちんと乾燥させてください。

●シェーバーを収納ケースに入れて保管します。

※室温5℃～35℃の環境で保管してください。
※直射日光の当たる場所には保管しないでください。
※夏場、車の中には放置しないでください。

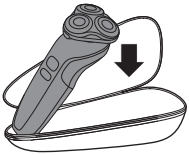

専用の替刃品番はSH50です。

刃の交換

●シェービングヘッド交換表示が点灯したら、刃の交換時期です。
専用の替刃（品番:SH50）と交換してください。

1 シェービングユニットリリースボタンを押し、シェービングユニットを開けます。

2 シェービングヘッドホルダーをシェービングユニットから引き抜きます。

3 シェービングヘッドホルダーの保持板を、反時計回りに回して（図❶）シェービングヘッドから外します（図❷）。他の保持板も同様に外します。

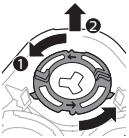

4 シェービングヘッドホルダーからシェービングヘッドの内刃と外刃を取り外し、新しい替刃に交換してください。



刃は3つとも○印の位置に外刃の突起部がくるようにセットしてください。

5 保持板をシェービングヘッドに戻し（図❶）時計回りに回して（図❷）シェービングヘッドホルダーにセットします。他の保持板も同様にセットします。

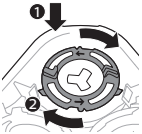

6 シェービングヘッドホルダーの金具をシェービングユニットのくぼみに差し込み、シェービングヘッドホルダーを閉じます。

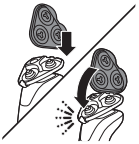

7 電源ボタンを約7秒間、シェービングヘッド交換表示が点滅するまで押し続け、シェーバーをリセットしてください。

シェーバーを廃棄するとき

※お客様による充電池の修理交換はできません。

リチウムイオン電池のリサイクルについて

このシェーバーはリチウムイオン電池を使用しています。
リチウムイオン電池はリサイクル可能な貴重な資源です。
ご使用済みの製品の廃棄に際しては、リチウムイオン電池を取り出し、各自治体の処理方法に従い、リサイクル協力店にお持ちください。

Li-ion

注意

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。

充電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電池を放電させてから、行ってください。

1 シェービングユニットをはずし、本体下部のネジを⊖ドライバーではずし、ユニットカバーをはずします。

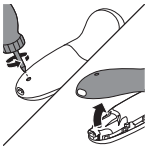

2 フロントカバーを曲げて、モーターユニットをはずします。

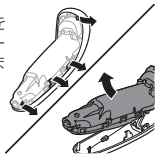

3 モーターユニットのカバーにあるツメをはずし、カバーを開けます。

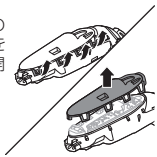

4 充電池ホルダーを持ち上げて工具でワイヤーを切断し、取り出します。

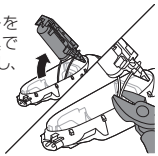

5 充電池ホルダーと充電池の接続部分をドライバーを使って下に折り曲げ、充電池を取り出します。

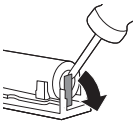

※充電池を取り外した後は、通電しないでください。
※ショートしないように充電池の端子をテープで覆ってください。
※充電池を取り外した後の製品の廃棄については、お住まいの地域の条例などに従って処分してください。

故障かな？と思ったら、
お調べください。

故障かな?と思ったら

だんだん切れ味が悪くなった

▶シェービングヘッド部が汚れていませんか？

▶シェービングヘッド部が損傷または摩耗していませんか？
損傷または摩耗しているときは、シェービングヘッドを交換してください。
（替刃品番：SH50）

▶シェービングヘッドに長いヒゲがからまっていませんか？

▶専用クリーニングカートリッジが汚れていませんか？
P18「クリーニングカートリッジの交換方法」をお読みになり、新しいクリーニングカートリッジと入れ替えてください。

充電しても使用時間が極端に短い

▶シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

▶シェーバーに充電アダプタが接続されていませんか？
充電アダプタを外してください。

▶充電はしましたか？
1時間以上の充電をしてください。

▶カギマークが表示されていませんか？
カギマークが表示されたらロックを解除してください。P8「ロック機能」の項をお読みください。

▶刃が動かなくなるほど汚れているか、破損していませんか？
シェービングヘッドをお手入れするか、交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

▶外刃にキズ、ヘコミはありませんか？
シェービングヘッドを交換してください。
（替刃品番：SH50）

充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？
洗浄充電器やシェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか？ 確認してください。

▶充電アダプタの電源コードが断線していませんか？
充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせいただき、同型充電アダプタ（品番：HQ8505）をご注文ください。

洗浄充電器を使用してもシェーバーがあまりきれいにならない

▶シェーバー本体が正しくセットされていますか？
シェーバー本体のLED表示を後ろ向きにし、シェービングユニットを下向きにして洗浄充電器にセットします。洗浄充電器キャップを下に押すとシェーバーがロックされます。

▶専用クリーニングカートリッジを使用していますか？
フィリップスの専用クリーニングカートリッジ（品番：JC302/51）をお買い求めください。

▶専用クリーニングカートリッジが古くなっていませんか？

▶専用クリーニングカートリッジが空になっていませんか？
P18「クリーニングカートリッジの交換方法」の項をお読みください。

洗浄充電器の洗浄ON/OFFタッチボタンを押しても作動しない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？

▶洗浄充電器の洗浄充電器キャップ部にシェーバーが正しくセットされていますか？

▶専用クリーニングカートリッジがセットされていますか？

以上の点検により、正常な状態に戻らない場合は、
フィリップスサポートセンターにお問い合わせください。

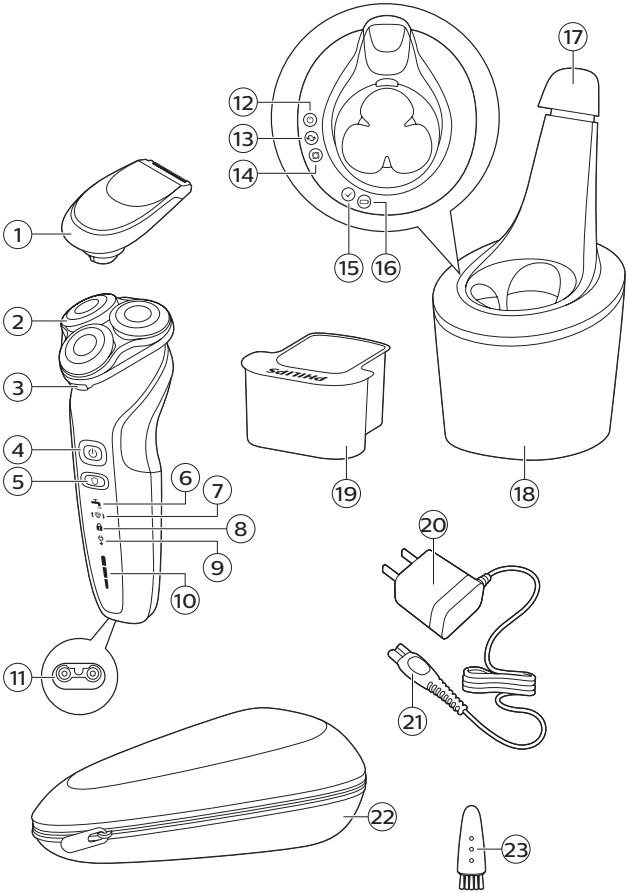
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
PHILIPS

General description (Fig. 1)

1 Precision trimmer
2 Click-on shaving unit
3 Shaving head holder release button
4 On/off button (shaver)
5 Guard mode button
6 Cleaning reminder
7 Replacement reminder
8 Travel lock symbol
9 'Unplug for use' reminder
10 Battery charge indicator
11 Socket for small plug
12 On/off button (SmartClean)
13 Cleaning cartridge replacement symbol
14 Cleaning symbol
15 Ready symbol
16 Charging symbol
17 SmartClean system cap
18 SmartClean system
19 Cleaning cartridge for SmartClean system
20 Supply unit
21 Small plug
22 Pouch
23 Cleaning brush

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at

www.philips.com/welcome.

Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- This appliance contains batteries that are non-replaceable.

- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

The display

Battery charge indicator

Quick charge: When the battery is empty and you connect the shaver to a wall socket, the lights of the battery charge indicator light up white one after the other repeatedly. When the battery contains enough energy for one shave, the bottom light of the battery charge indicator starts flashing white slowly.

As charging continues, each light flashes and then lights up continuously to indicate to what level the battery has been charged.

Battery fully charged

When the battery is fully charged, all lights of the battery charge indicator light up white continuously.

Note: When you press the on/off button while the shaver is still connected to the wall socket, the 'unplug for use' symbol lights up (see ''Unplug for use' reminder').

Note: When the battery is full, the display switches off automatically after 30 minutes.

Battery low

When the battery is almost empty, the bottom light of the battery charge indicator flashes orange. At this point there is enough energy left for one shave.

Remaining battery charge

The remaining battery charge is indicated by the lights of the battery charge indicator that light up continuously.

'Unplug for use' reminder

The 'unplug for use' reminder flashes to remind you to disconnect the shaver from the wall socket before you can switch it on.

Travel lock

When you are going to travel, you can lock the shaver to prevent it from accidentally switching on.

Replacement reminder

For maximum shaving performance, we advise you to replace the shaving heads every two years. The shaver is equipped with a replacement reminder which flashes to remind you to replace the shaving heads.

Note: After replacing the shaving heads, you should reset the replacement reminder by pressing the on/off button for 7 seconds. If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

Cleaning reminder

Clean the shaver after every use for optimal performance (see 'Cleaning and maintenance'). When you switch off the shaver, the cleaning reminder flashes to remind you to clean the shaver.

Guard mode

This setting lowers the rotation speed of the shaver (see 'Shaving with guard mode').

Charging

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty.

Charging takes max. 1 hour. A fully charged shaver has a shaving time of up to 60 minutes.

Note: You cannot use the shaver while it is charging.

Quick charge

After approx. 3 minutes of charging, the shaver contains enough power for one shave. The bottom light of the battery charge indicator starts flashing white slowly when the quick charge is finished.

Charging with the supply unit

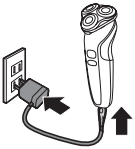

1 Make sure the shaver is switched off.
2 Put the small plug in the shaver and put the supply unit in the wall socket.

   The display of the shaver indicates that the shaver is charging.
3 After charging, remove the supply unit from the wall socket and pull the small plug out of the shaver.

Charging in the SmartClean system (specific types only)

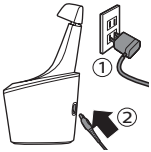

1 Put the small plug in the back of the SmartClean system.
2 Put the supply unit in the wall socket.

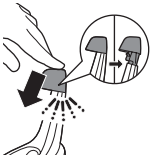

3 Press to open the SmartClean system cap, to be able to place the shaver in the holder ('click').



4 Hold the shaver upside down above the holder. Make sure the front of the shaver points towards the SmartClean system holder.

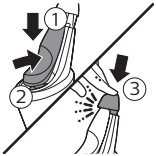

5 Place the shaver in the holder, tilt the shaver backwards and press down the SmartClean system cap to connect the shaver ('click').

The battery symbol starts to flash to indicate that the appliance is charging. When the battery is fully charged, the battery symbol lights up continuously.

Using the shaver

Always check the shaver and all accessories before use. Do not use the shaver or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- Use this shaver for its intended household use as described in this manual.
- For hygienic reasons, the shaver should only be used by one person.
- Trimming is easier when the skin and hair are dry.
- Do not place the SmartClean near water and make sure it does not get wet.

Note: This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can only be used without cord.

Switching the shaver on and off

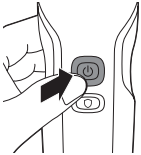

1 To switch the shaver on or off, press the on/off button once.

The display lights up for a few seconds to show the battery status.

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Shaving tips

- For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.

Guard mode

- Activate the guard mode to reduce the rotation speed of the shaver (see ‚Shaving with guard mode').

Dry shaving

1 Switch on the shaver.
2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

3 Switch off and clean the shaver after each use (see 'Cleaning and maintenance').

Wet shaving

For a more comfortable shave, you can also use this shaver on a wet face with shaving foam or shaving gel.

1 Apply some water to your skin.

2 Apply shaving foam or shaving gel to your skin.

3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
4 Switch on the shaver.

5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

6 Switch off and clean the shaver after each use (see 'Cleaning and maintenance').

7 Dry your face.

Note: Make sure that you rinse all foam or shaving gel off the shaver.

Shaving with guard mode

1 Switch on the shaver.

2 Press the guard button once if you want to shave at a lower, more gentle speed.

3 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

4 Switch off the guard mode by pressing the guard button once.

Note: The shaver automatically starts operating at normal speed when you switch it on again.

Using click-on attachments

Removing or attaching click-on attachments

1 Make sure the shaver is switched off.

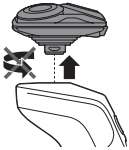

2 Pull the attachment straight off the appliance.

Note: Do not twist the attachment while you pull it off the appliance.

3 Insert the lug of the attachment into the slot in the top of the appliance. Then press down the attachment to attach it to the appliance (‘click’).

Using the precision trimmer attachment (specific types only)

You can use the precision trimmer attachment to touch up your beard, sideburns and moustache.

1 Attach the attachment to the appliance (‘click’).

2 Switch on the appliance.

3 Hold the precision trimmer perpendicular to the skin and move it downwards while exerting gentle pressure.

4 Switch off the appliance and clean the attachment after use.

Travel lock

You can lock the shaver when you are going to travel to prevent it from turning on accidentally.

Activating the travel lock

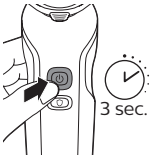

1 Press the on/off button for 3 seconds to use the travel lock mode.

While you activate the travel lock, the indications on the display light up briefly. When the travel lock is activated, the travel lock symbol flashes.

Deactivating the travel lock

1 Press the on/off button for 3 seconds.
While you deactivate the travel lock, the indications on the display light up briefly. The shaver switches on and is now ready for use again.

Note: The shaver unlocks automatically when it is connected to a wall socket.

Cleaning and maintenance

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.

Be careful with hot water. Always check if the water is not too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

While rinsing the shaving unit, water may drip out of the base of the shaver. This is a normal occurrence.



1 Switch on the shaver.
2 Rinse the shaving unit under a warm tap.
You can also clean the shaving unit with the cleaning brush supplied.

3 Switch off the shaver. Press the release button to open the shaving unit.

4 Rinse the hair chamber under the tap.

You can also clean the inside of the shaving unit with the cleaning brush supplied.

5 Rinse the shaving head holder under a warm tap.
6 Carefully shake off excess water and let the shaving head holder air-dry completely.

7 Close the shaving head holder ('click').

Cleaning the precision trimmer attachment

Never dry the precision trimmer attachment with a towel or tissue, as this may damage the trimming teeth.

Clean the precision trimmer attachment after each use.

1 Switch on the appliance with the precision trimmer attachment attached.

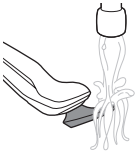

2 Rinse the attachment under a warm tap.

3 After cleaning, switch off the appliance.

4 Carefully shake off excess water and let the attachment air-dry completely.

For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil every six months.

Cleaning the shaver in the SmartClean system

Keep cleaning cartridges out of reach of children. Do not take internally. Avoid contact with eyes. In case of eye contact, thoroughly flush with cold water. If irritation persists, get medical attention.

- Only use the shaver, SmartClean system and cleaning cartridge provided to charge or clean the shaver.
- For optimal cleaning results, replace the cleaning cartridge every 3 months.
- Other Philips shavers may not work with this SmartClean system.

- To avoid evaporation, do not expose cleaning fluid to direct sunlight.
- The SmartClean system thoroughly cleans but does not disinfect your shaver, therefore, do not share the shaver with others.
- Place the SmartClean system on a flat, stable and fluid-resistant surface to avoid any leakage. Be careful not to tip or move the SmartClean system when it is ready for use.
- Use this product for its intended household use as described in this manual.

Preparing the SmartClean system for use

Caution: Do not tilt the SmartClean system to prevent leakage.

Note: Hold the SmartClean system while you prepare it for use.

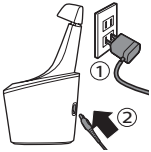

1 Put the small plug in the back of the SmartClean system.

2 Put the supply unit in the wall socket.



3 While holding the SmartClean system with one hand, press the button on the side of the SmartClean system and lift the top part of the SmartClean system.



4 Pull the seal off the cleaning cartridge.

5 Place the cleaning cartridge in the SmartClean system.



6 While holding the SmartClean system with one hand, gently push the top part of the SmartClean system back down (‘click’).

Using the SmartClean system

Note: if you use the shaver with shaving foam, shaving gel or preshave products, briefly rinse the shaver under a warm tap before you clean it in the SmartClean system.

Caution: Always shake excess water off the shaver before you place it in the SmartClean system.

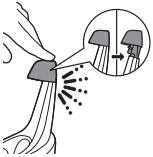

1 Press to open the SmartClean system cap, to be able to place the shaver in the holder ('click').



2 Hold the shaver upside down above the holder. Make sure the front of the shaver points towards the SmartClean system holder.

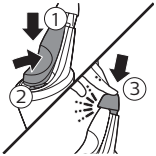

3 Place the shaver in the holder (1), tilt the shaver backwards (2) and press down the top cap to connect the shaver ('click') (3).

The battery symbol on the SmartClean system starts to flash, which indicates that the shaver is charging.

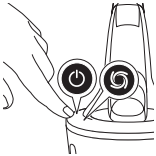

4 Press the on/off button on the SmartClean system to start the cleaning program.

During the cleaning phase, the cleaning symbol flashes. When the cleaning phase is done (after approx. 10 minutes), the cleaning symbol lights up continuously.

Next, the ready symbol lights up continuously.

30 minutes after the cleaning program and charging are done, the SmartClean system switches off automatically.

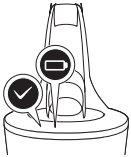

The battery symbol lights up continuously to indicate that the shaver is fully charged. Charging takes approx. 1 hour.

5 To let the shaver dry, you can leave it in the SmartClean system until your next shave. You can also remove the shaver from the SmartClean system, shake off excess fluid, open the shaving unit and let the shaver air-dry. Press to open the SmartClean system cap, to be able to remove the shaver from the holder ('click').

Note: If you press the on/off button of the SmartClean system during the cleaning program, the program stops. In this case, the cleaning or drying symbol goes out.

Note: If you disconnect the SmartClean system from its power supply, the cleaning program stops.

Thorough cleaning

1 Switch off the appliance.

2 Press the release button to open the shaving unit.

3 Pull the shaving head holder off the bottom part of the shaving unit.

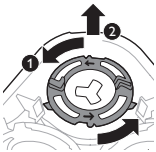

4 Turn the retaining rings counterclockwise and remove them.

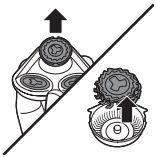

5 Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

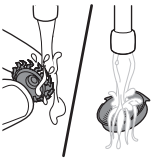

6 Clean the cutter and guard under the tap.

7 Put the cutter back into the guard.

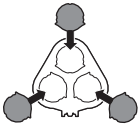

8 Place the shaving heads in the shaving head holder.

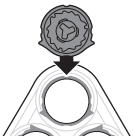

Note: Make sure that the projections of the shaving heads fit exactly into the recesses of the shaving head holder.

9 Place the retaining rings back onto the shaving head holder and turn them clockwise ('click').

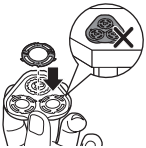

Note: Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.

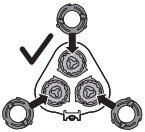

- Each retaining ring has two recesses and two projections that fit exactly in the projections and recesses of the shaving head holder.

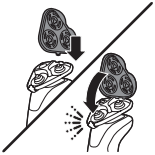

10 Reinsert the hinge of the shaving head holder into the slot of the shaving unit. Close the shaving head holder.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads ('Ordering accessories').

Replacement reminder

The replacement reminder indicates that the shaving heads need to be replaced.The shaving unit symbol lights up when you switch off the shaver.

1 To replace the shaving heads, remove the shaving heads from the shaving head holder one by one. See chapter Thorough Cleaning for the instructions on how to remove the retaining rings and shaving heads.

2 To reset the replacement reminder, press and hold the on/off button for approx. 7 seconds. If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

Replacing the cartridge of the SmartClean system

Replace the cleaning cartridge when the replacement symbol flashes orange or every 3 months.



1 While holding the SmartClean system with one hand, press the button on the side of the SmartClean system and lift the top part of the SmartClean system.

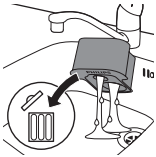

2 Remove the cleaning cartridge from the SmartClean system and pour out any remaining cleaning fluid.

   You can safely pour the cleaning fluid down the sink.

3 Discard the empty cleaning cartridge.

   Contact your local town or city officials for recycling information.

4 Unpack the new cleaning cartridge and pull off the seal.

5 Place the cleaning cartridge in the SmartClean system.



6 While holding the SmartClean system with one hand, gently push the top part of the SmartClean system back down (‘click’).

Note: When the SmartClean system is ready for use, do not move the product to prevent leakage.

Storage

Note: We advise you to let the appliance dry before you store it in the pouch.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories are available:

- SH50 Philips shaving heads
- RQ111 Philips beard styler
- Precision trimmer
- RQ575 Philips cleansing brush
- HQ8505 supply unit

Note: The availability of the accessories may differ by country.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable shaver battery

Only remove the rechargeable battery when you discard the appliance. Before you remove the battery, make sure that the appliance is disconnected from the mains and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance.

Be careful, the battery strips are sharp.

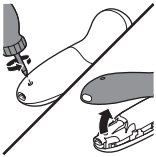

1 Remove the screw in the back of the shaver.

2 Remove the back panel.

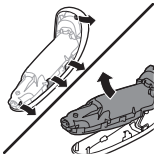

3 Take out the power unit.

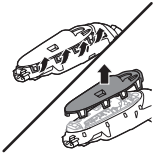

4 Bend the snap hooks aside and remove the transparent cover of the power unit.

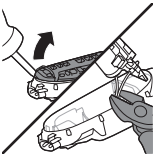

5 Lift out out the battery holder and cut the wires with a pair of cutting pliers or scissors.

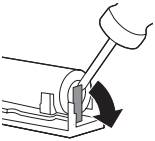

6 Bend the battery tags aside with a pair of cutting pliers.

7 Remove the rechargeable batteries.

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common

problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still attached to the wall socket. For safety reasons, the appliance can only be used without charging cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery.
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly (see 'Thorough cleaning') or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads in the regular way or clean them thoroughly (see 'Thorough cleaning').

Problem	Possible cause	Solution
I replaced the shaving heads, but the replacement reminder is still showing.	You have not reset the replacement reminder.	To reset the replacement reminder, press and hold the on/off button for more than 7 seconds.
A shaving head symbol has suddenly appeared on the display.	This symbol is the replacement reminder.	Replace the shaving heads.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

SmartClean system

Problem	Possible cause	Solution
The SmartClean system does not work when I press the on/off button.	The SmartClean system is not connected to the wall socket.	Put the small plug in the SmartClean system and put the supply unit in the wall socket.
	The cleaning cartridge is empty. The replacement symbol flashes to indicate that you have to replace the cleaning cartridge.	Place a new cleaning cartridge in the SmartClean system.

Problem	Possible cause	Solution
The shaver is not entirely clean after I clean it in the SmartClean system.	You have not placed the shaver in the SmartClean system properly, so there is no electrical connection between the SmartClean system and the shaver.	Press down the top cap (‘click’) to ensure a proper connection between the shaver and the SmartClean system.
	The battery of the shaver is not charged sufficiently.	If the battery of the shaver is not charged sufficiently, the SmartClean system may not work properly. The shaver needs to be able to switch on briefly during the rinsing phase. Charge the shaver for a short time before you use the SmartClean system to clean your shaver.
	The cleaning cartridge needs to be replaced.	Replace the cleaning cartridge.
	You have used another cleaning fluid than the original Philips cleaning cartridge.	Only use the original Philips cleaning cartridge.
	The hole of the drain of the cleaning cartridge is blocked.	Remove the cartridge from the SmartClean system and push the hairs down the drain with a toothpick.

Problem	Possible cause	Solution
The shaver is not fully charged after I charge it in the SmartClean system.	You have not placed the shaver in the SmartClean system properly, so there is no electrical connection between the SmartClean system and the shaver.	Press down the top cap (‘click’) to ensure a proper connection between the shaver and the SmartClean system.
The nose trimmer attachment pulls at the hairs.	You move the appliance too fast.	Slowly move the attachment around to remove all unwanted hairs in your nostrils.
The nose trimmer attachment does not work.	The cutting element of the attachment is very dirty, for instance because some nasal mucus has dried inside the cutting element.	Clean the cutting element by rinsing it under the tap with hot water. Switch on the appliance and rinse the cutting element once more to remove any remaining hairs
		If rinsing the nose trimmer under the tap does not unblock the cutting element, then immerse it in a glass with warm water for a few minutes. Then switch on the appliance and rinse it under the tap.

保証と アフターサービス

保証書と修理サービスについて（必ずお読みください）

〈保証書・最終ページに付属〉

● 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ、洗浄充電器（シェービングユニット、クリーニングブラシ、トリマー、収納ケースを除く）

【補修用性能部品の保有期間】

● 補修用性能部品の保有期間は製造打ち切り後6年です。
● 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

● 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

● 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

● 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

● 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

● 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限ります）
● 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
● 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

● お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年　月　日	お買い上げ店名	TEL.　(　　)

ご使用の時、このような症状はありませんか?

●本体にさわると時々電気を感じる。
●こげくさい臭いがする。
●電源コード部を動かすと通電したり、しなかったりする。
●その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

仕　　様

品　　番	S6680/26
洗浄充電器品番	JC5108
電源方式	充電式（専用充電アダプタ使用）
充電アダプタ品番	HQ8505
消費電力	9W（AC100V充電時）
定格電圧	AC100-240V（50/60Hz）
本体質量	約173g
充電時間	約1時間
替　　刃	SH50
クリーニングカートリッジ	専用クリーニングカートリッジ（JC302/51）

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南2-13-37 フィリップスビル

キリトリ線

無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
   ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
   ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
   ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
   ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
   ⑤ 保証書の提示がない場合。
   ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※ 保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※ お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

キリトリ線

フィリップス 電動シェーバー 保証書

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。
お客様にご記入いただいた個人情報（保証書の控え）は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品　　名	電動シェーバー
品　　番	S6680/26
保証期間	お買い上げ日より2年
対象部分	本体、充電アダプタ、洗浄充電器（シェービングユニット、クリーニングブラシ、トリマー、収納ケースを除く）
お買い上げ日	年　　月　　日
お客様	ご住所 〒
	ご芳名
	電話番号
★販売店	販売店名・住所・電話番号

★ 保証書は再発行しませんので、大切に保管してください。
★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

0120（944）859

受付時間:9:00～18:00（年末年始除く）

Webからのお問い合わせ

MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。
MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL http://www.philips.co.jp/myphilips-about

この印刷物は再生紙を使用しております。

3000.035.2763.1（04/19）

©2019 Philips Japan, Ltd.

キリトリ線

キリトリ線