
Cisco Business 141AC Mesh Extender cisco.




Thank you for choosing the Cisco Business 141AC Mesh Extender. The Mesh Extender can be used to expand coverage of your existing Cisco Business Wireless Network. This Quick Start Guide will get you up and running in no time.

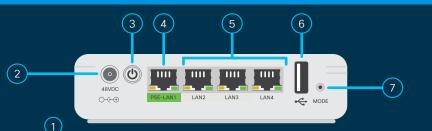

What's in the Box

- Cisco Business 141AC Mesh Extender
- Quick Start Guide
- Power Adapter
- Power Cable
- Technical Support Contact List
- Pointer Card China RoHS
- Compliance Information (for EU SKU only)

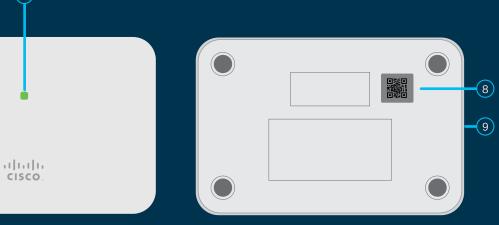

Product Features

- 1 Status LED
- 2 48V DC Port
- 3 Power ON/OFF Push Button
- (4) PSE-LAN1 Port
- 5 LAN2/LAN3/LAN4 Ports
- (6) USB Port (for future use)
- (7) Mode Button
- 8 QR Code
- 9 Kensington Lock Slot (on side)

Cisco Business app*



First, You'll Need... • An ad


- An active Internet connection
- An operational/configured CBW Master AP (140AC/145AC/240AC) with Mesh enabled
- A router (to act as your DHCP server)
- A QR code reader (if not using the Cisco Business app). Free QR code readers are available for Android and Apple products.



Download the free Cisco Business app to simplify setup and monitoring. The app already contains a QR code reader. *When available



Get Connected

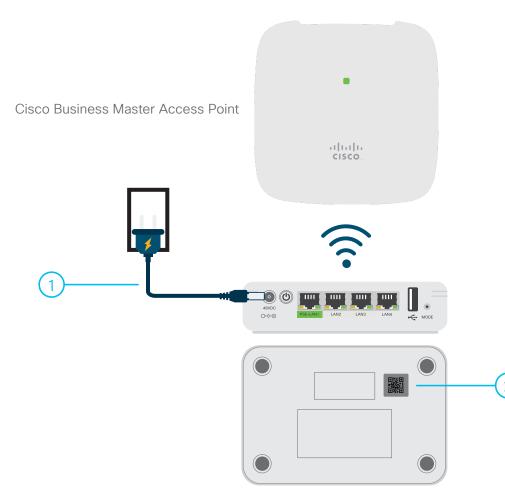

Cisco Business 141AC Mesh Extender

Preparing Your Product

 Connect the power adapter (provided) to the mesh extender and plug it into a power source. Press the power button and the mesh extender will begin initial boot up. During this process the LED will cycle through red, amber and green. This is normal and you may proceed to step 2 below.

If you have downloaded the Cisco Business app, use it to connect to the SSID of the Master AP and proceed to "Get Configured". If you are not using the app then obtain the MAC address by scanning the QR code on the back of the mesh extender. Once you have the MAC address proceed to "Get Configured".

Get Configured

Step 1–Connect



VIA WIRELESS (WEB UI) Join the SSID of the Master AP that was set up during initial configuration.

Step 2–Access via Wireless (WEB UI)

- Launch a web browser and type the URL https://ciscobusiness.cisco and press "Enter".
- 2 Log into the Master AP with the user name and password you created while configuring the Master AP.
- 3 Go to Wireless Settings>WLAN Users>Local MAC Addresses.
- 4 Click "Add MAC Address" and add the MAC address of the mesh extender to join the network.

NOTE: If the access point was not set up with Mesh support enabled you will not be able to add Mesh extenders to your WLAN until Mesh support is enabled. Go to **Wireless Settings** > **Mesh** and if the "Mesh" button is not enabled (green), enable it and select "apply". Select "Yes" on the pop-up confirmation window. The AP will now reboot.

For more details on LED indicators and advanced configurations, see "Cisco Business Wireless Access Point Administration Guide".

Step 3–Mount and Ground

Cisco Business mesh extenders can be mounted in several configurations.

For detailed mounting instructions, see "Cisco Business Wireless Access Point Administration Guide".

Support



For Cisco support and additional product documentation, including the Administration Guide, visit: cisco.com/go/cbw141ac

©2020 Cisco and/or its affiliates. All rights reserved. Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: https:// www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Open the app and go to "Monitor my network". Select the Discovered Master and log into the Master AP. Select "Add a device" and follow the steps to complete the setup.

......

CISCO

5 Select the **Type** as "Whitelist"

- 6 The mesh extender LED will cycle through multiple states while the unit is uploading firmware and joining the Master AP. This may take ten minutes or more. A solid or blinking green LED ensures that joining was successful.
- (7) You can navigate to Wireless Settings>Access Points and check if the mesh extender is listed under the "AP Model" column of the table. This may take a few minutes to appear in the table.
- 8 Save the configuration by selecting the red disk icon in the web interface (UI) header and select "OK" on the confirmation pop-up window.
- 9 You can now manage the mesh extender using the Master AP web-UI